 


- After install the program, WPS-Dongle shortcut will come out on the PC screen.

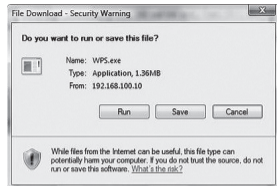


- 6) Make sure your personal firewall allows WPS-Dongle software to pass through.

## 4. Start Projection
 
### 1) Enter the LOGIN CODE

- You can see the "Login Code" on the projector screen.

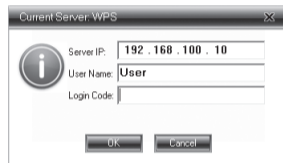

### 2) Click the "Play" button to start projection!



# Wireless Presentation System Quick Installation Guide

 
Model Name: WPS-Dongle

Version: 1.00

## 1. Package Contents

- WPS-Dongle Box
- Power Adapter (DC 6V, 0.8A)
- CD-ROM with User's Manual & Driver inside.
- Quick Installation Guide


## 2. Physical Details

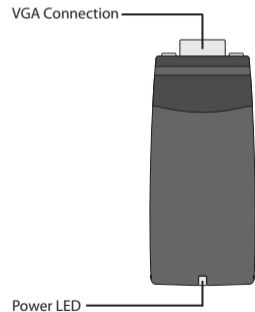

1

## 3. Installation

 1) Plug WPS-Dongle to projector VGA connector or connect projector VGA cable to WPS-Dongle VGA connector and turn on projector power.

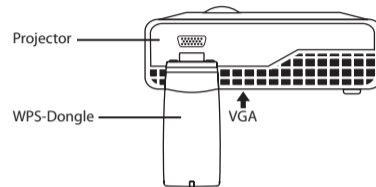

2) Turn on WPS-Dongle.

- When Projector shows the default menu on the screen as below, it indicates the WPS-Dongle is ready now.



2

 
3) Make sure your PC WLAN is enabled already, and connect your PC with WPS-Dongle.

4) Open your browser and it will redirect to WPS-Dongle main page automatically, or you can enter the IP address to access the WPS-Dongle web home page.

- The default IP address of WPS-Dongle is **192.168.100.10** or refers to the IP address shown on the left corner of projector screen.



5) Download the client software. Please select the "Windows Vista / XP / 2000".



3