

# Panasonic®

Model No.

**TH-42LF30ER**  
**TH-47LF30ER**

## Operating Instructions

### FULL HD LCD Display



## HDMI

**English**

Please read these instructions before operating your set and retain them for future reference.



TQB0E2182U

# Dear Panasonic Customer

Welcome to the Panasonic family of customers. We hope that you will have many years of enjoyment from your new LCD Display.

To obtain maximum benefit from your set, please read these Instructions before making any adjustments, and retain them for future reference.

Retain your purchase receipt also, and note down the model number and serial number of your set in the space provided on the rear cover of these instructions.

Visit our Panasonic Web Site <http://panasonic.net>

## Table of Contents

<b>Important Safety Notice</b> .....	<b>3</b>	<b>Screensaver (For preventing image retention)</b> ....	<b>29</b>
<b>Safety Precautions</b> .....	<b>4</b>	Setup of Screensaver Time .....	30
<b>Accessories</b> .....	<b>7</b>	<b>Wobbling</b> .....	<b>30</b>
Accessories Supply .....	7	<b>No activity power off</b> .....	<b>31</b>
Remote Control Batteries .....	7	<b>ECO Mode settings</b> .....	<b>32</b>
<b>Connections</b> .....	<b>8</b>	<b>Customizing the Input labels</b> .....	<b>33</b>
AC cord connection and fixing.....	8	<b>Selecting the On-Screen Menu Language</b> .....	<b>34</b>
Video equipment connection .....	8	<b>Customizing the On-Screen Menu Display</b> .....	<b>34</b>
VIDEO, COMPONENT / RGB IN		<b>Setup for MULTI DISPLAY</b> .....	<b>35</b>
and HDMI connection.....	9	How to Setup MULTI DISPLAY .....	35
DVI-D IN, DVI-D OUT connection .....	10	ID Remote Control Function .....	36
PC Input Terminals connection.....	11	<b>Setup for Input Signals</b> .....	<b>37</b>
SERIAL Terminals connection .....	12	Component / RGB-in select.....	37
<b>Power On / Off</b> .....	<b>14</b>	YUV / RGB-in select.....	37
<b>Selecting the input signal</b> .....	<b>16</b>	Signal menu .....	38
<b>Basic Controls</b> .....	<b>17</b>	3D Y/C Filter .....	38
<b>ASPECT Controls</b> .....	<b>19</b>	Colour system .....	39
<b>Digital Zoom</b> .....	<b>20</b>	Cinema reality .....	39
<b>On-Screen Menu Displays</b> .....	<b>21</b>	XGA Mode .....	39
<b>Adjusting Pos. /Size</b> .....	<b>22</b>	Noise reduction .....	40
<b>Picture Adjustments</b> .....	<b>24</b>	Sync .....	40
Advanced settings .....	25	HDMI Range.....	40
<b>Sound Adjustment</b> .....	<b>26</b>	Input signal display .....	41
SDI Sound Output .....	26	<b>Options Adjustments</b> .....	<b>42</b>
<b>PRESENT TIME Setup / Set up TIMER</b> .....	<b>27</b>	<b>Troubleshooting</b> .....	<b>45</b>
PRESENT TIME Setup.....	27	<b>Applicable Input Signals</b> .....	<b>46</b>
Set up TIMER .....	28	<b>Shipping condition</b> .....	<b>48</b>
		<b>Specifications</b> .....	<b>49</b>

### Trademark Credits

- VGA is a trademark of International Business Machines Corporation.
- Macintosh is a registered trademark of Apple Inc., USA.
- SVGA, XGA, SXGA and UXGA are registered trademarks of the Video Electronics Standard Association. Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

### Note:

Image retention may occur. If you display a still picture for an extended period, the image might remain on the screen. However, it will disappear after a while.

# Important Safety Notice

## WARNING

- 1) To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.  
Do not place containers with water (flower vase, cups, cosmetics, etc.) above the set. (including on shelves above, etc.)  
No naked flame sources, such as lighted candles, should be placed on / above the set.
- 2) To prevent electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.
- 3) Do not remove the earthing pin on the power plug. This apparatus is equipped with a three pin earthing-type power plug. This plug will only fit an earthing-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician.  
Do not defeat the purpose of the earthing plug.
- 4) To prevent electric shock, ensure the earthing pin on the AC cord power plug is securely connected.

## CAUTION

This appliance is intended for use in environments which are relatively free of electromagnetic fields. Using this appliance near sources of strong electromagnetic fields or where electrical noise may overlap with the input signals could cause the picture and sound to wobble or cause interference such as noise to appear. To avoid the possibility of harm to this appliance, keep it away from sources of strong electromagnetic fields.

## IMPORTANT: THE MOULDED PLUG

FOR YOUR SAFETY, PLEASE READ THE FOLLOWING TEXT CAREFULLY.

This display is supplied with a moulded three pin mains plug for your safety and convenience. A 10 amp fuse is fitted in this plug. Shall the fuse need to be replaced, please ensure that the replacement fuse has a rating of 10 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic dealer.

Do not cut off the mains plug.

Do not use any other type of mains lead except the one supplied with this display.


The supplied mains lead and moulded plug are designed to be used with this display to avoid interference and for your safety.

If the socket outlet in your home is not suitable, get it changed by a qualified electrician.

If the plug or mains lead becomes damaged, purchase a replacement from an authorized dealer.

**WARNING : — THIS DISPLAY MUST BE EARTHED.**

How to replace the fuse. Open the fuse compartment with a screwdriver and replace the fuse.

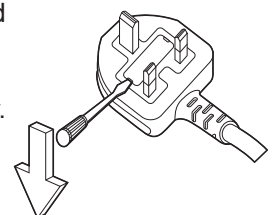

# Safety Precautions

## WARNING

### ■ Setup

**This LCD Display is for use only with the following optional accessories. Use with any other type of optional accessories may cause instability which could result in the possibility of injury.**

(All of the following accessories are manufactured by Panasonic Corporation.)

- Pedestal ..... TY-ST20-K
- HD-SDI Terminal Board with audio ..... TY-FB10HD

Always be sure to ask a qualified technician to carry out set-up.

Small parts can present choking hazard if accidentally swallowed. Keep small parts away from young children. Discard unneeded small parts and other objects, including packaging materials and plastic bags/sheets to prevent them from being played with by young children, creating the potential risk of suffocation.

**Do not place the Display on sloped or unstable surfaces, and ensure that the Display does not hang over the edge of the base.**

- The Display may fall off or tip over.

**Do not place any objects on top of the Display.**

- If water is spilled onto the Display or foreign objects get inside it, a short-circuit may occur which could result in fire or electric shock. If any foreign objects get inside the Display, please consult your local Panasonic dealer.

**Transport only in upright position!**

- Transporting the unit with its display panel facing upright or downward may cause damage to the internal circuitry.

**Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table cloths and curtains.**

**For sufficient ventilation;**

**Leave a space of 10 cm or more at the top, left and right, and 5 cm or more at the rear, and also keep the space between the bottom of the display and the floor surface.**

**Cautions for Wall Installation**

- Wall installation should be performed by an installation professional. Installing the Display incorrectly may lead to an accident that results in death or serious injury. Furthermore, when installing on a wall, a wall hanging bracket that conforms to VESA standards (VESA 400 × 400) must be used.
- When installing the Display vertically, be sure to install the power indicator onto the bottom of the Display.

## ■ When using the LCD Display

The Display is designed to operate on 220 - 240 V AC, 50/60 Hz.

**Do not cover the ventilation holes.**

- Doing so may cause the Display to overheat, which can cause fire or damage to the Display.

**Do not stick any foreign objects into the Display.**

- Do not insert any metal or flammable objects into the ventilations holes or drop them onto the Display, as doing so can cause fire or electric shock.

**Do not remove the cover or modify it in any way.**

- High voltages which can cause severe electric shocks are present inside the Display. For any inspection, adjustment and repair work, please contact your local Panasonic dealer.

**Ensure that the mains plug is easily accessible.**

An apparatus with CLASS I construction shall be connected to a mains socket outlet with a protective earthing connection.

**Do not use any power supply cord other than that provided with this unit.**

- Doing so may cause fire or electric shocks.

**Securely insert the power supply plug as far as it will go.**

- If the plug is not fully inserted, heat may be generated which could cause fire. If the plug is damaged or the wall socket is loose, they shall not be used.

**Do not handle the power supply plug with wet hands.**

- Doing so may cause electric shocks.

**Do not do anything that may damage the power cable. When disconnecting the power cable, pull on the plug body, not the cable.**

- Do not damage the cable, make any modifications to it, place heavy objects on top of it, heat it, place it near any hot objects, twist it, bend it excessively or pull it. To do so may cause fire and electric shock. If the power cable is damaged, have it repaired at your local Panasonic dealer.

**If the Display is not going to be used for any prolonged length of time, unplug the power supply plug from the wall outlet.**

**To prevent the spread of fire, keep candles or other open flames away from this product at all times.**



## ■ If problems occur during use

**If a problem occurs (such as no picture or no sound), or if smoke or an abnormal odour starts to come out from the Display, immediately unplug the power supply plug from the wall outlet.**

- If you continue to use the Display in this condition, fire or electric shock could result. After checking that the smoke has stopped, contact your local Panasonic dealer so that the necessary repairs can be made. Repairing the Display yourself is extremely dangerous, and shall never be done.

**If water or foreign objects get inside the Display, if the Display is dropped, or if the cabinet becomes damages, disconnect the power supply plug immediately.**

- A short circuit may occur, which could cause fire. Contact your local Panasonic dealer for any repairs that need to be made.

## Safety Precautions

---



### CAUTION

#### ■ When using the LCD Display

**Do not bring your hands, face or objects close to the ventilation holes of the Display.**

- Heated air comes out from the ventilation holes at the top of Display will be hot. Do not bring your hands or face, or objects which cannot withstand heat, close to this port, otherwise burns or deformation could result.

**Be sure to disconnect all cables before moving the Display.**

- If the Display is moved while some of the cables are still connected, the cables may become damaged, and fire or electric shock could result.

**Disconnect the power supply plug from the wall socket as a safety precaution before carrying out any cleaning.**

- Electric shocks can result if this is not done.

**Clean the power cable regularly to prevent it becoming dusty.**

- If dust built up on the power cord plug, the resultant humidity can damage the insulation, which could result in fire. Pull the power cord plug out from the wall outlet and wipe the mains lead with a dry cloth.

**Do not burn or breakup batteries.**

- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

## Cleaning and maintenance

**The front of the display panel has been specially treated. Wipe the panel surface gently using only a cleaning cloth or a soft, lint-free cloth.**

- If the surface is particularly dirty, wipe with a soft, lint-free cloth which has been soaked in pure water or water in which neutral detergent has been diluted 100 times, and then wipe it evenly with a dry cloth of the same type until the surface is dry.
- Do not scratch or hit the surface of the panel with fingernails or other hard objects, otherwise the surface may become damaged. Furthermore, avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the surface may be adversely affected.

**If the cabinet becomes dirty, wipe it with a soft, dry cloth.**

- If the cabinet is particularly dirty, soak the cloth in water to which a small amount of neutral detergent has been added and then wring the cloth dry. Use this cloth to wipe the cabinet, and then wipe it dry with a dry cloth.
- Do not allow any detergent to come into direct contact with the surface of the Display. If water droplets get inside the unit, operating problems may result.
- Avoid contact with volatile substances such as insect sprays, solvents and thinner, otherwise the quality of the cabinet surface may be adversely affected or the coating may peel off. Furthermore, do not leave it for long periods in contact with articles made from rubber or PVC.

**Usage of a chemical cloth**

- Do not use a chemical cloth for the panel surface.
- Follow the instructions for the chemical cloth to use it for the cabinet.


# Accessories

## Accessories Supply


Check that you have the accessories and items shown



Operating Instruction book

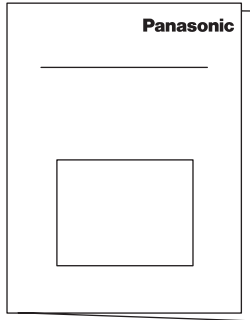


CD-ROM  
(Operating instructions)

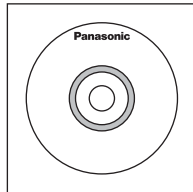


Remote Control  
Transmitter  
N2QAYB000691



 Batteries for the Remote  
Control Transmitter  
(R6 (UM3) Size × 2)






Power supply cord

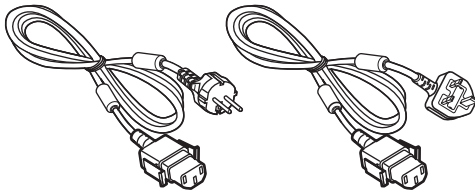

## Remote Control Batteries

Requires two R6 batteries.

1. Pull and hold the hook, then open the battery cover.
2. Insert batteries - note correct polarity ( + and -).
3. Replace the cover.

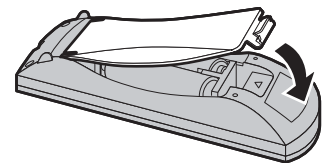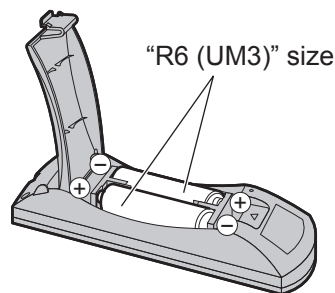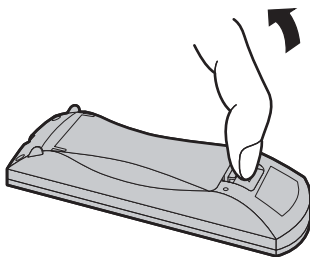

### Helpful Hint:

For frequent remote control users, replace old batteries with Alkaline batteries for longer life.

### ⚠️ Precaution on battery use

Incorrect installation can cause battery leakage and corrosion that will damage the remote control transmitter. Disposal of batteries should be in an environment-friendly manner.


**Observe the following precaution:**

1. Batteries shall always be replaced as a pair. Always use new batteries when replacing the old set.
2. Do not combine a used battery with a new one.
3. Do not mix battery types (example: "Zinc Carbon" with "Alkaline").
4. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries.
5. Battery replacement is necessary when remote control acts sporadically or stops operating the Display set.
6. Do not burn or breakup batteries.  
Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

# Connections

## AC cord connection and fixing

**AC cord fixing**

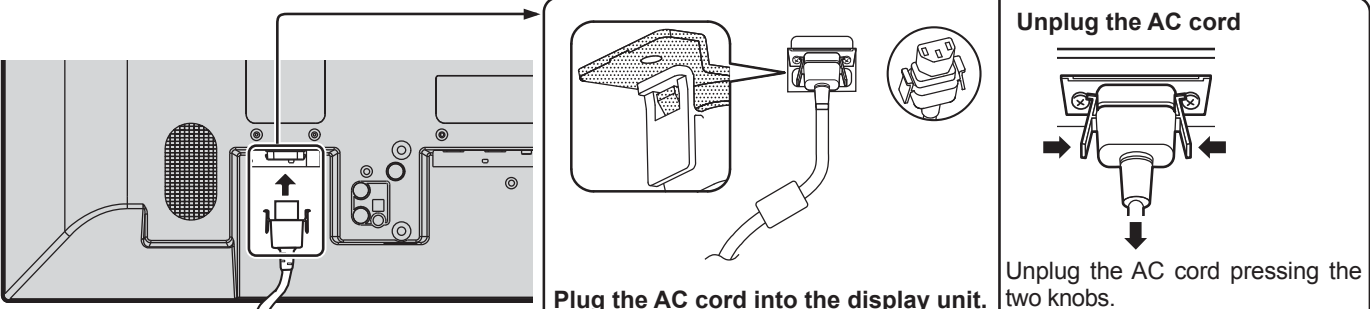


**Plug the AC cord into the display unit.**  
Plug the AC cord until it clicks.  
**Note:**  
Make sure that the AC cord is locked on both the left and right sides.

**Unplug the AC cord**

Unplug the AC cord pressing the two knobs.  
**Note:**  
When disconnecting the AC cord, be absolutely sure to disconnect the AC cord plug at the socket outlet first.

## Video equipment connection

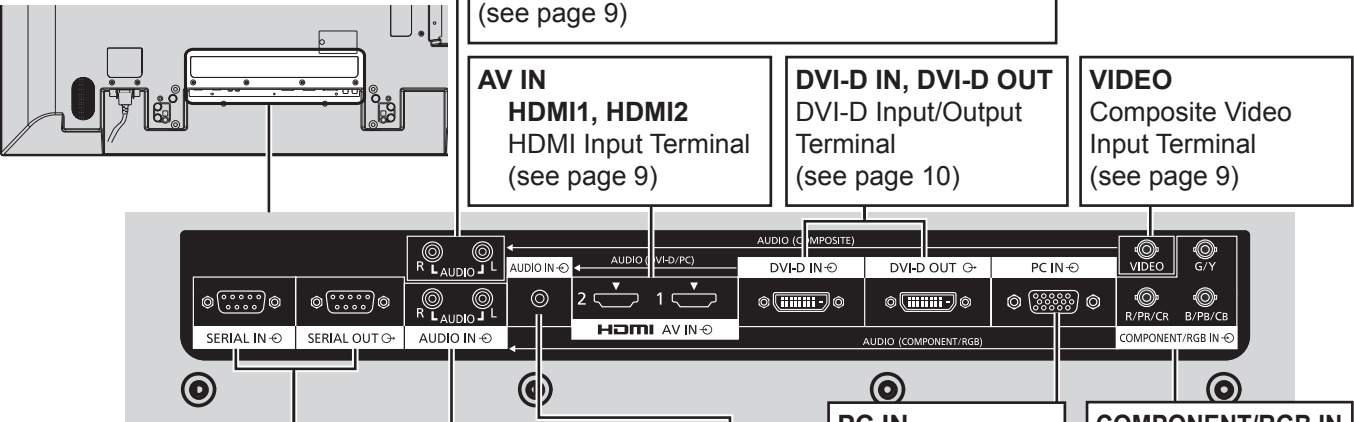

**AUDIO IN (COMPOSITE)**  
Connect the audio output of a device connected to VIDEO.  
(see page 9)

**AV IN**  
**HDMI1, HDMI2**  
HDMI Input Terminal  
(see page 9)

**DVI-D IN, DVI-D OUT**  
DVI-D Input/Output Terminal  
(see page 10)

**VIDEO**  
Composite Video Input Terminal  
(see page 9)

**SERIAL IN, SERIAL OUT**  
SERIAL Input/Output Terminal  
Control the Display by connecting to PC.  
(see page 12)

**AUDIO IN (COMPONENT / RGB)**  
Connect the audio output of a device connected to COMPONENT/RGB IN.  
(see page 9)

**PC IN**  
PC Input Terminal  
(see page 11)

**AUDIO IN (DVI-D / PC)**  
Connect the audio output of a device connected to DVI-D IN, PC IN.  
(see page 10, 11)


**COMPONENT/RGB IN**  
Component/RGB Video Input Terminal  
(see page 9)




# VIDEO, COMPONENT / RGB IN and HDMI connection

**Note:**

Additional equipment, cables and adapter plugs shown are not supplied with this set.



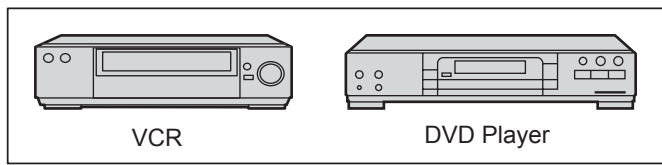


AUDIO OUT L R VIDEO OUT

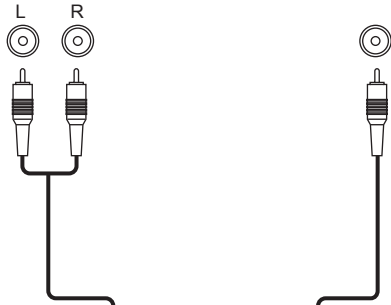


[Pin assignments and signal names for HDMI terminal]

Pin No.	Signal Name	Pin No.	Signal Name
①	T.M.D.S Data2+	⑪	T.M.D.S Clock Shield
②	T.M.D.S Data2 Shield	⑫	T.M.D.S Clock-
③	T.M.D.S Data2-	⑬	CEC
④	T.M.D.S Data1+	⑭	Reserved (N.C. on device)
⑤	T.M.D.S Data1 Shield		
⑥	T.M.D.S Data1-	⑮	SCL
⑦	T.M.D.S Data0+	⑯	SDA
⑧	T.M.D.S Data0 Shield	⑰	DDC/CEC Ground
⑨	T.M.D.S Data0-	⑱	+5V Power
⑩	T.M.D.S Clock+	⑲	Hot Plug Detect

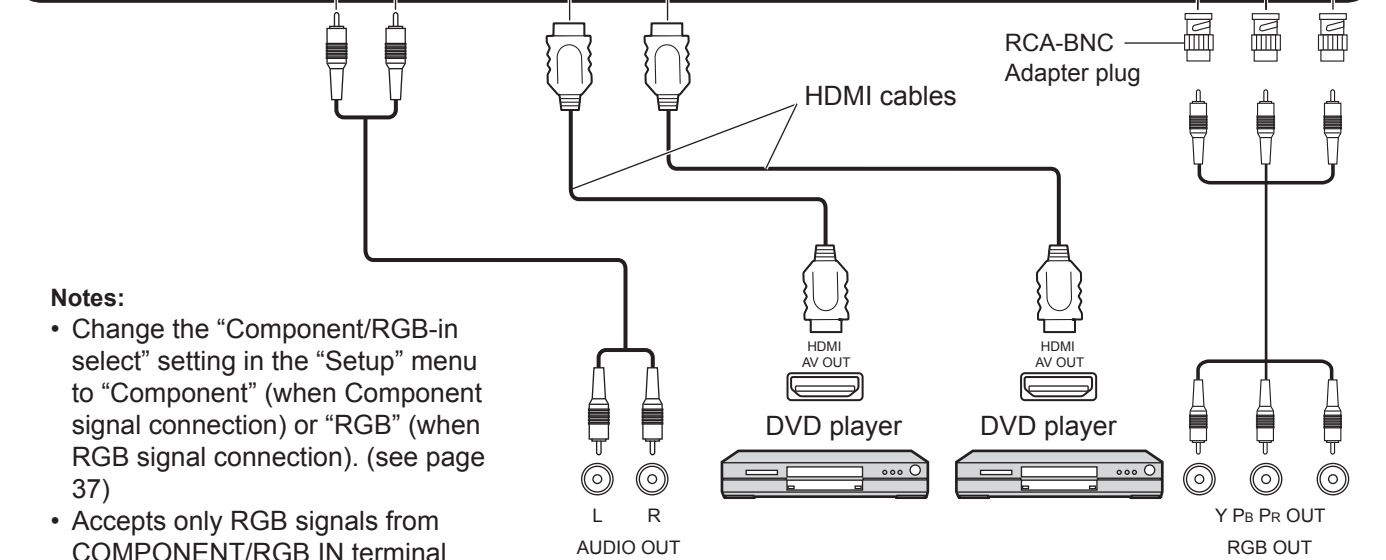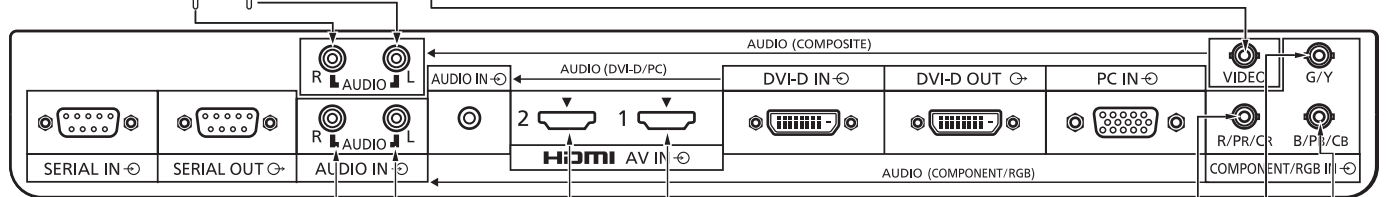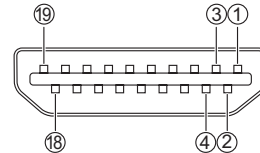


**Notes:**

- Change the "Component/RGB-in select" setting in the "Setup" menu to "Component" (when Component signal connection) or "RGB" (when RGB signal connection). (see page 37)
- Accepts only RGB signals from COMPONENT/RGB IN terminal with "Sync on G".

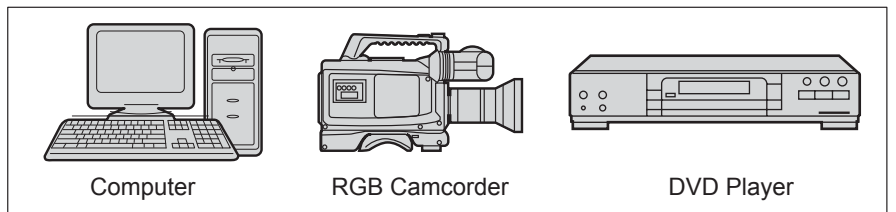


## DVI-D IN, DVI-D OUT connection

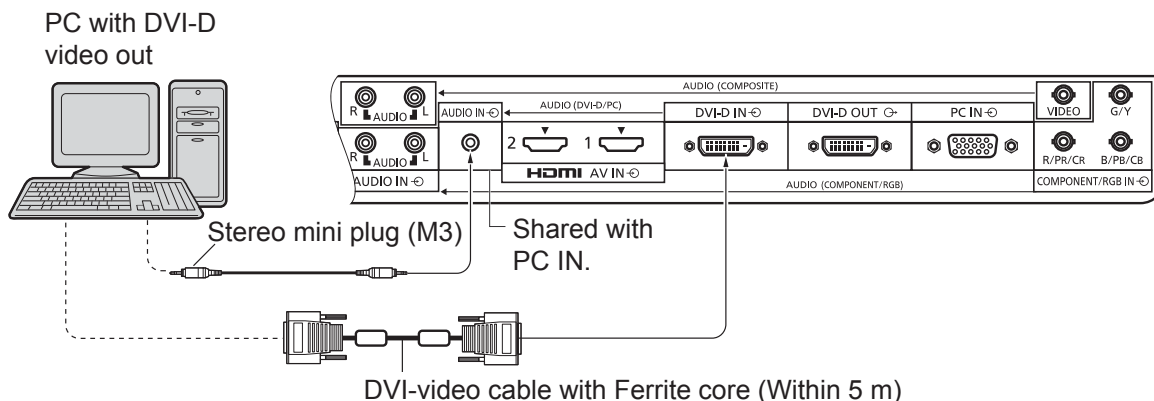

### Daisy chain connection

When using the multi display, multiple LCD Displays can be daisy chained.

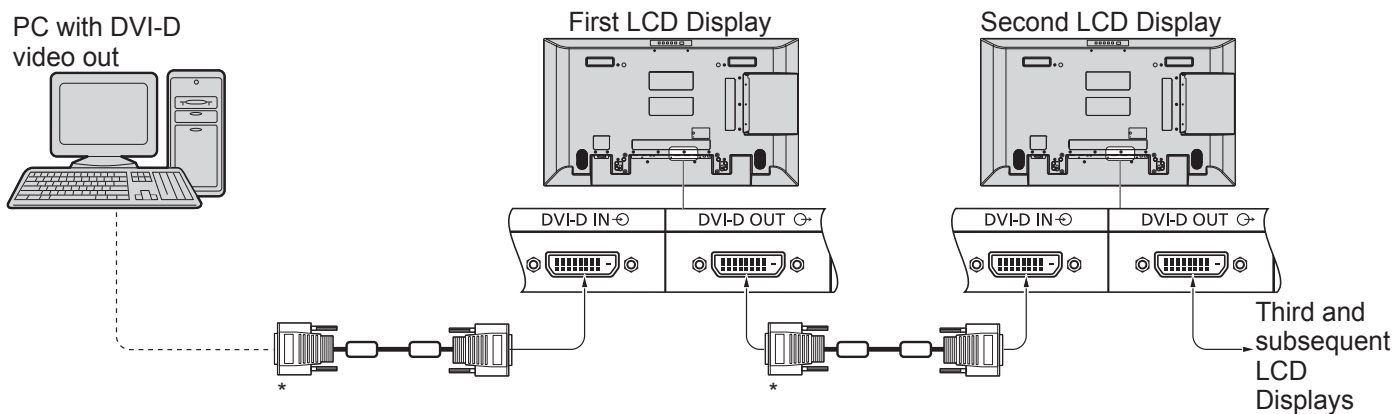


\* DVI-video cable with Ferrite core

### Notes:

- Up to 10 displays can be connected with a daisy chain, but the number of the connected displays may be limited by a cable, signal or equipment to use.
- HDCP can be supported for up to 8 displays for a daisy chain.

### DVI-D Input/Output Connector Pin Layouts

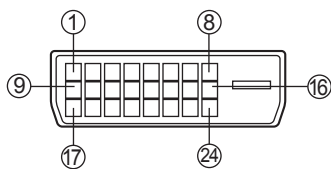


Connection port view

Pin No.	Signal Name	Pin No.	Signal Name
①	T.M.D.S. data 2-	⑬	_____
②	T.M.D.S. data 2+	⑭	+5 V DC
③	T.M.D.S. data 2 shield	⑮	Ground
④	_____	⑯	Hot plug detect
⑤	_____	⑰	T.M.D.S. data 0-
⑥	DDC clock	⑱	T.M.D.S. data 0+
⑦	DDC data	⑲	T.M.D.S. data 0 shield
⑧	_____	⑳	_____
⑨	T.M.D.S. data 1-	㉑	_____
⑩	T.M.D.S. data 1+	㉒	T.M.D.S. clock shield
⑪	T.M.D.S. data 1 shield	㉓	T.M.D.S. clock+
⑫	_____	㉔	T.M.D.S. clock-

### Notes:

- Additional equipment and cables shown are not supplied with this set.
- Use the DVI-D cable with Ferrite core complying with the DVI standard. Image deterioration may occur depending on the length or the quality of the cable.


# PC Input Terminals connection

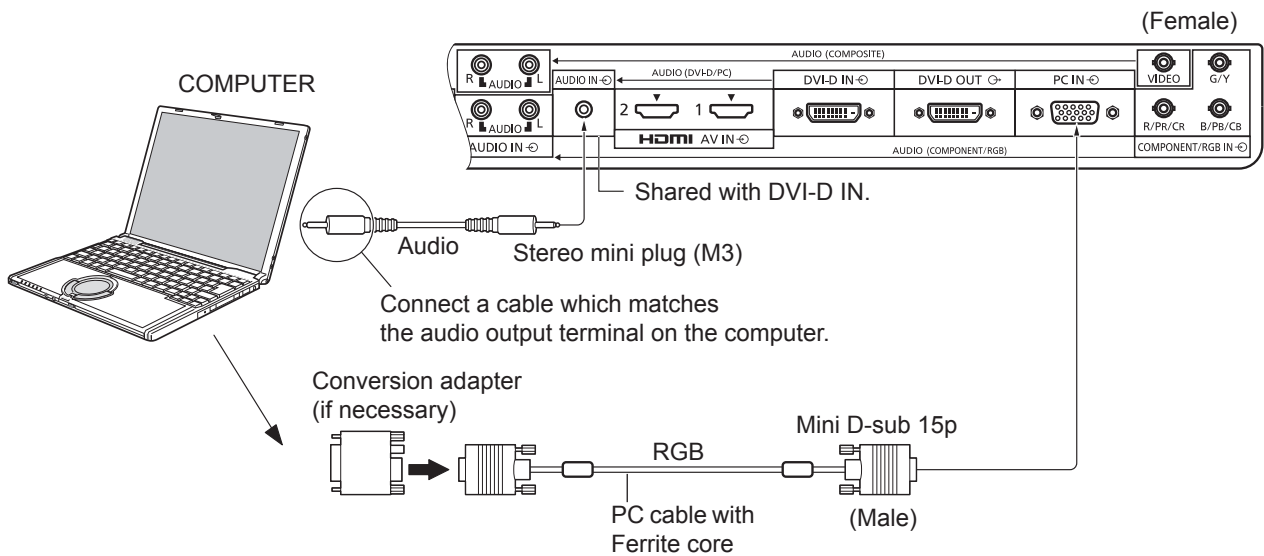

**Notes:**

- Computer signals which can be input are those with a horizontal scanning frequency of 30 to 110 kHz and vertical scanning frequency of 48 to 120 Hz. (However, the image will not be displayed properly if the signals exceed 1,200 lines.)
- The display resolution is a maximum of 1,440 × 1,080 dots when the aspect mode is set to “4:3”, and 1,920 × 1,080 dots when the aspect mode is set to “16:9”. If the display resolution exceeds these maximums, it may not be possible to show fine detail with sufficient clarity.
- The PC input terminals are DDC2B-compatible. If the computer being connected is not DDC2B-compatible, you will need to make setting changes to the computer at the time of connection.
- Some PC models cannot be connected to the set.
- There is no need to use an adapter for computers with DOS/V compatible Mini D-sub 15P terminal.
- The computer shown in the illustration is for example purposes only.
- Additional equipment and cables shown are not supplied with this set.
- Panasonic recommends using a PC cable that includes a Ferrite core.
- Do not set the horizontal and vertical scanning frequencies for PC signals which are above or below the specified frequency range.

**Signal Names for Mini D-sub 15P Connector**

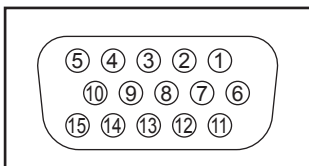


Pin Layout for PC Input Terminal


Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	SDA
③	B	⑧	GND (Ground)	⑬	HD/SYNC
④	NC (not connected)	⑨	+5 V DC	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	SCL

## SERIAL Terminals connection

The SERIAL terminal is used when the Display is controlled by a computer.

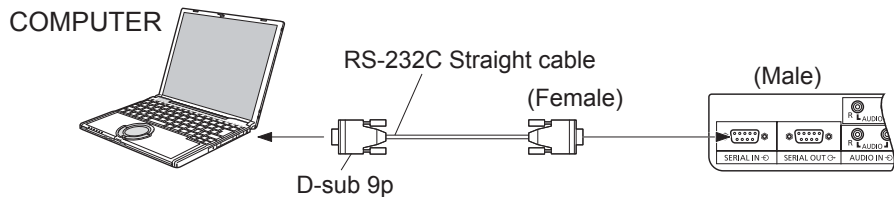


In addition, a particular LCD Display can be controlled with a PC while several LCD Displays are daisy chained.

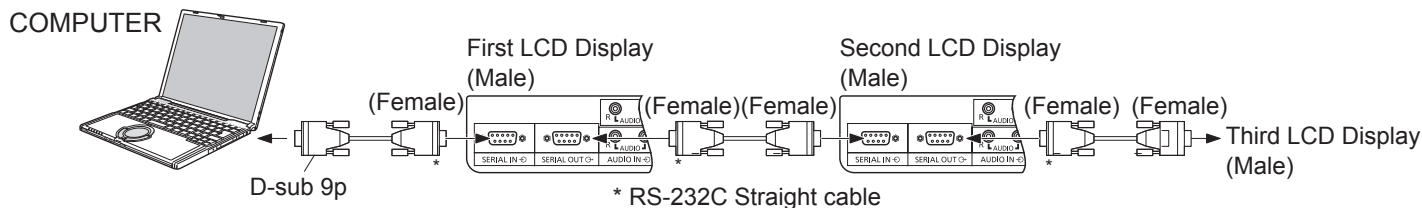

**Notes:**

- Use the RS-232C straight cable to connect the computer to the Display.
- The computer shown is for example purposes only.
- Additional equipment and cables shown are not supplied with this set.
- When using daisy chain, set "Serial Daisy Chain" in the Options menu. (see page 43)
- For daisy chain connection, use a straight cable connected to pins numbered ② through ⑧.

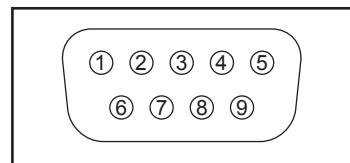

Pin layout for SERIAL Terminal

The SERIAL terminal conforms to the RS-232C interface specification, so that the Display can be controlled by a computer which is connected to this terminal.

The computer will require software which allows the sending and receiving of control data which satisfies the conditions given below. Use a computer application such as programming language software. Refer to the documentation for the computer application for details.

**Communication parameters**

Signal level	RS-232C compliant
Synchronization method	Asynchronous
Baud rate	9600 bps
Parity	None
Character length	8 bits
Stop bit	1 bit
Flow control	-


**Signal names for SERIAL IN terminal**

Pin No.	Details
②	R X D
③	T X D
④	DTR
⑤	GND
⑥	DSR
⑦ ⑧	↔ (Shorted in this set)
① • ⑨	NC

These signal names are those of computer specifications.

## Basic format for control data

The transmission of control data from the computer starts with a STX signal, followed by the command, the parameters, and lastly an ETX signal in that order. If there are no parameters, then the parameter signal does not need to be sent.

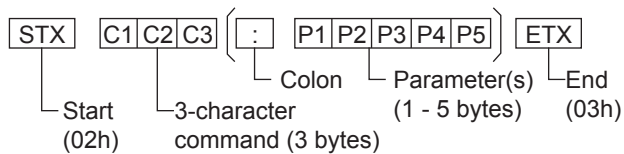

### Notes:

- If multiple commands are transmitted, be sure to wait for the response for the first command to come from this unit before sending the next command.
- If an incorrect command is sent by mistake, this unit will send an “ER401” command back to the computer.
- Consult an Authorized Service Center for detail instructions on command usage.


## Command

Command	Parameter	Control details
PON	None	Power ON
POF	None	Power OFF
AVL	***	Volume 000 - 100
AMT	0	Audio MUTE OFF
	1	Audio MUTE ON
IMS	None	Input select (toggle)
	SL1	SLOT input (SLOT INPUT)
	AV1	VIDEO input (VIDEO)
	AV2	COMPONENT/RGB IN input (Component)
	HM1	HDMI1 input (HDMI1)
	HM2	HDMI2 input (HDMI2)
	PC1	DVI-D IN input (DVI) PC IN input (PC)
DAM	None	Screen mode select (toggle)
	ZOOM	Zoom1
	FULL	16:9
	NORM	4:3
	ZOM2	Zoom2

With the power off, this display responds to PON command only.

# Power On / Off

## Connecting the AC cord plug to the Display.

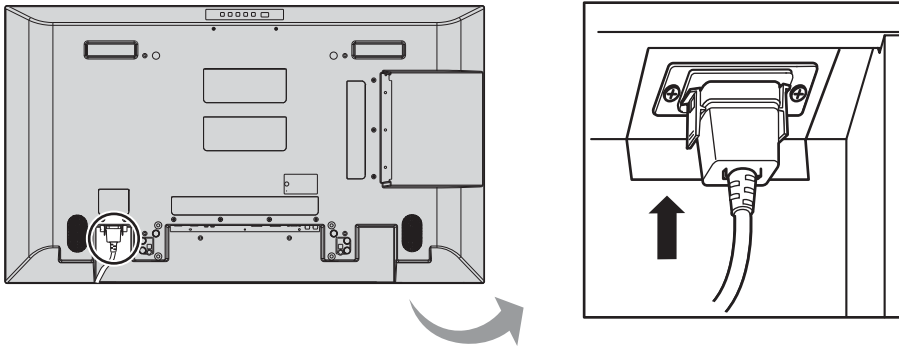


## Connecting the plug to the Wall Outlet

### Notes:

- Main plug types vary between countries. The power plug shown at right may, therefore, not be the type fitted to your set.
- When disconnecting the AC cord, be absolutely sure to disconnect the AC cord plug at the socket outlet first.


Press the Power switch on the Display to turn the set on: Power-On.

Power Indicator: Green

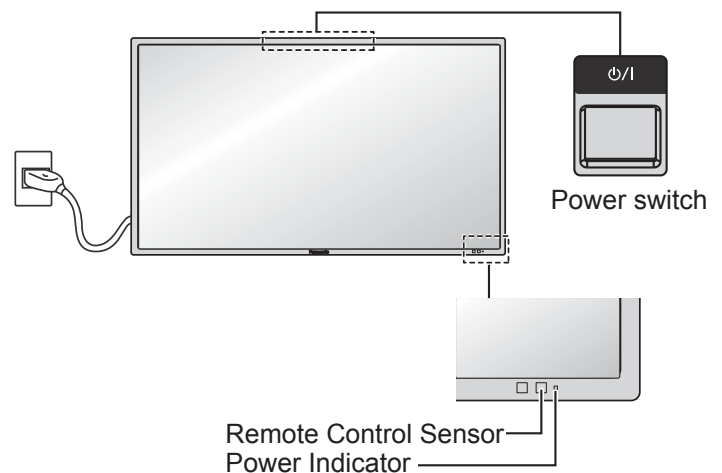


### POWER




Press the  button on the remote control to turn the Display off.

Power Indicator: Red (standby)


Press the  button on the remote control to turn the Display on.

Power Indicator: Green

Turn the power to the Display off by pressing the  switch on the unit, when the Display is on or in standby mode.

### Note:


During operation of the power management function, the power indicator turns orange in the power off state.

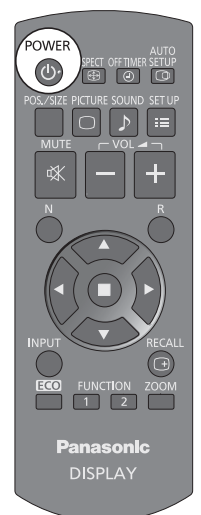





**When first switching on the unit**

Following screen will be displayed when the unit is turned on for the first time. Select the items with the remote control. Unit buttons are invalid.

**OSD Language**

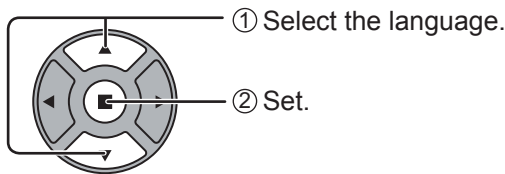

**PRESENT TIME Setup**

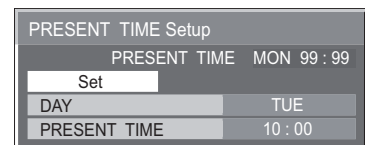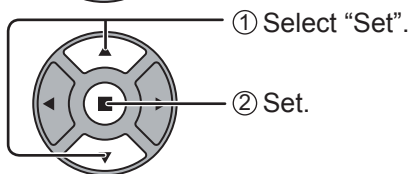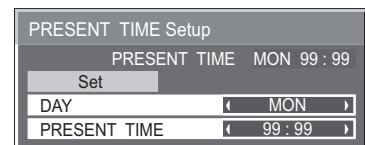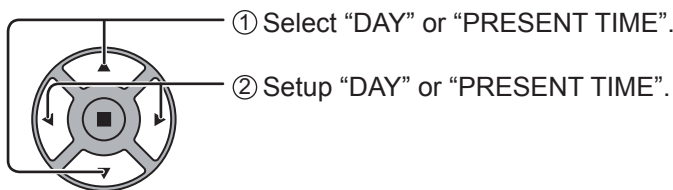

**Notes:**

- Once the items are set, the screens won't be displayed when switching on the unit next time.
- After the setting, the items can be changed in the following menus.  
 OSD Language (see page 34)  
 PRESENT TIME Setup (see page 27)

**Power ON warning message**

The following message may be displayed when turning the unit power ON:

**No activity power off Precautions**



If "No activity power off" in Setup menu is set to "Enable", a warning message is displayed every time the power is turned ON. (see page 31)

This message display can be set with the following menu: Options menu

Power On Message (see page 44)

# Selecting the input signal

INPUT



Press to select the input signal to be played back from the equipment which has been connected to the Display.

Input signals will change as follows:

→ HDMI1 → HDMI2 → VIDEO → Component\* → PC → DVI →

HDMI1: HDMI input terminal in AV IN (HDMI1).

HDMI2: HDMI input terminal in AV IN (HDMI2).

VIDEO: Video input terminal in VIDEO.

Component\*: Component or RGB input terminal in COMPONENT/RGB IN.

PC: PC input terminal in PC IN.

DVI: DVI input terminal in DVI-D IN.

\* "Component" may be displayed as "RGB" depending on the setting of "Component/RGB-in select". (see page 37)



When an optional Terminal Board is installed:

→ HDMI1 → HDMI2 → SLOT INPUT → VIDEO → Component → PC → DVI →


SLOT INPUT: Input terminal in Terminal Board

**Note:**

When a Terminal Board incompatible with the Display is installed, "Non-Compatible Function Board" is displayed.

**Notes:**


- Selecting is also possible by pressing the INPUT button on the unit.
- Select to match the signals from the source connected to the component/RGB input terminals. (see page 37)

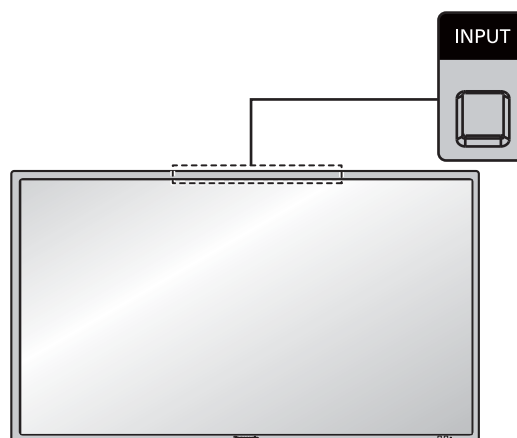



# Basic Controls

## Main Unit

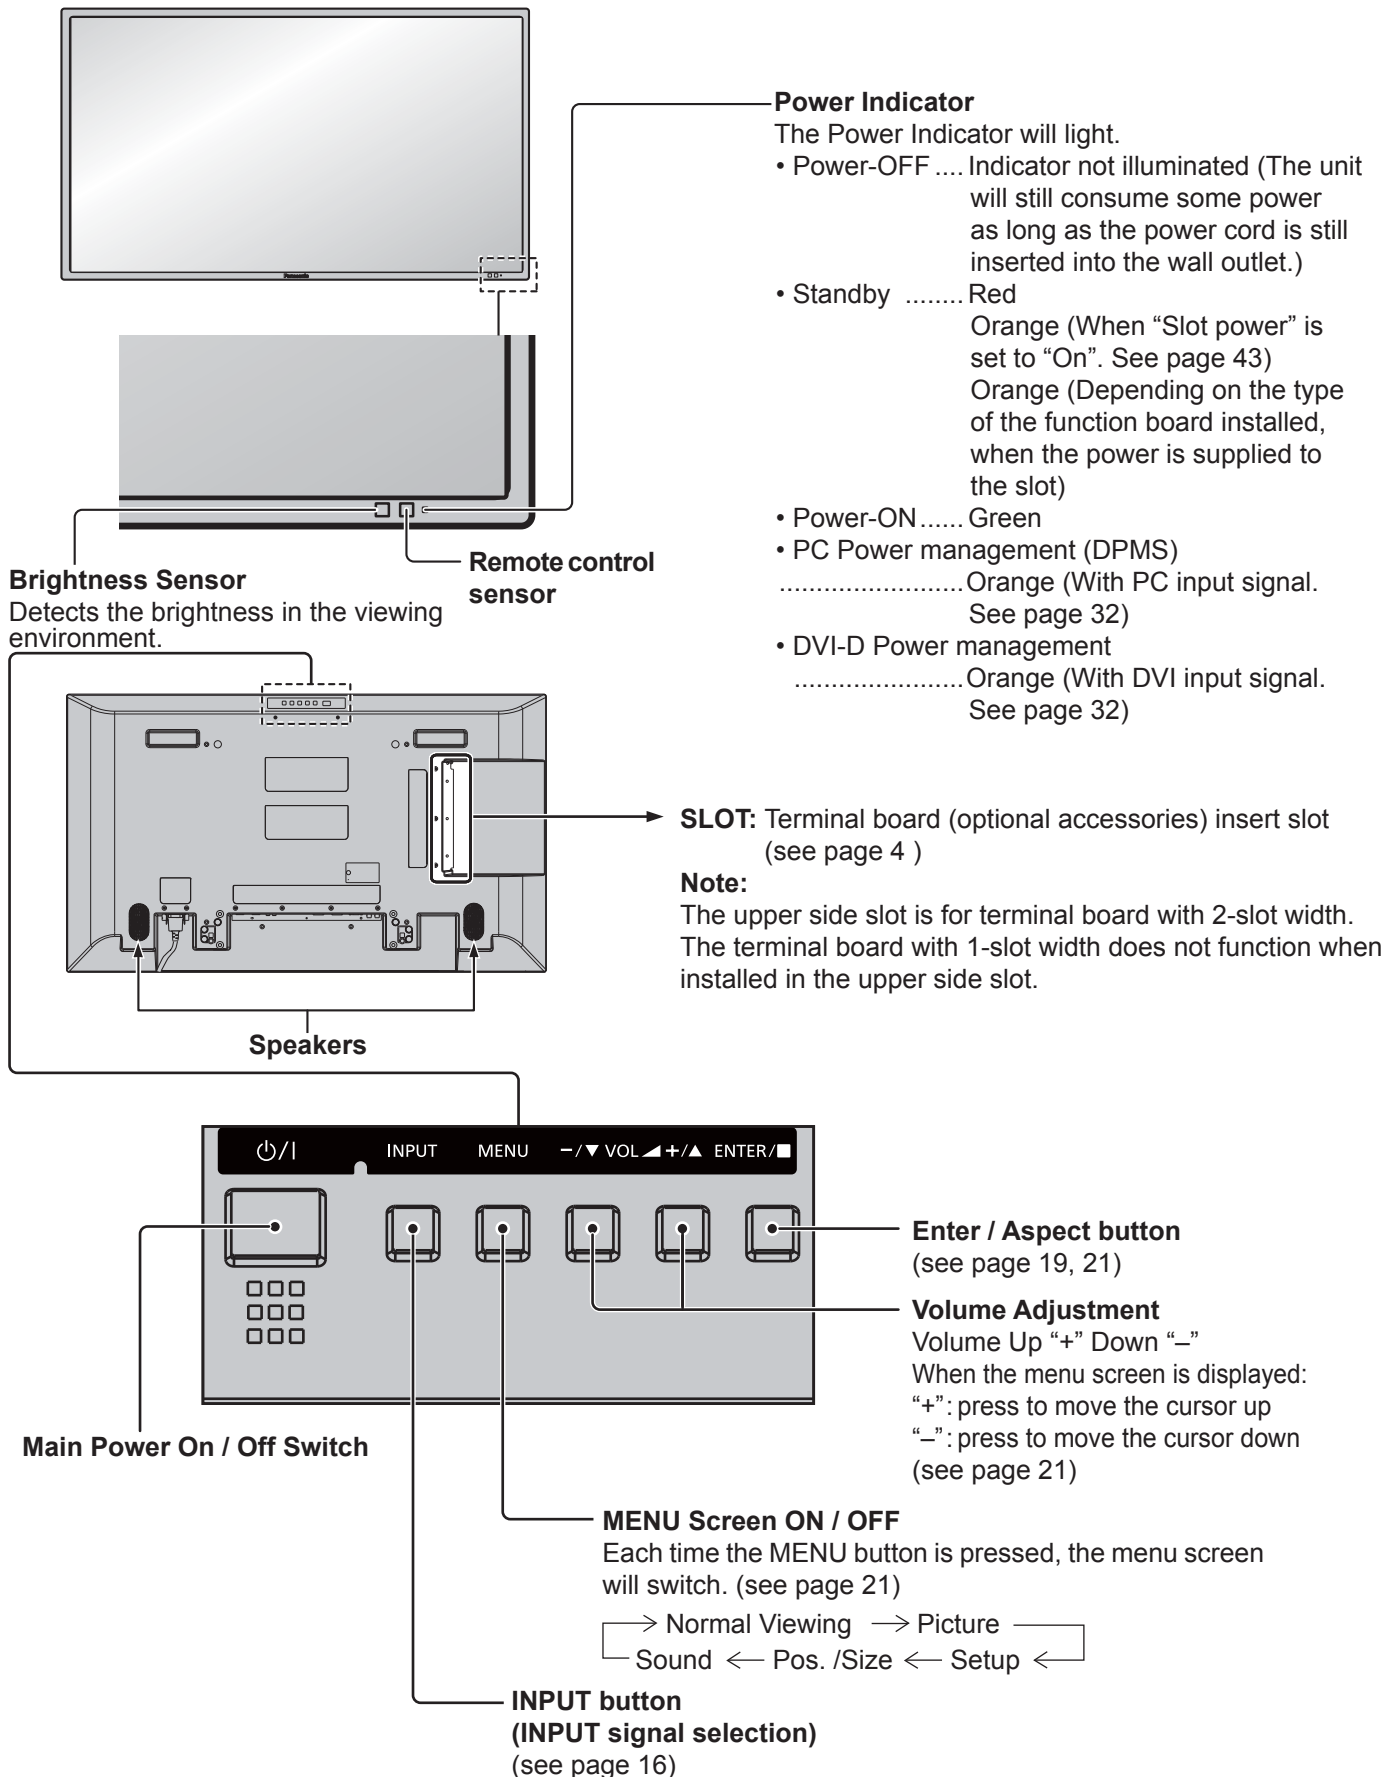

## Remote Control Transmitter

**ACTION button**  
Press to make selections.

**ASPECT button**  
Press to adjust the aspect.  
(see page 19)

**Standby (ON / OFF) button**  
The Display must first be plugged into the wall outlet and turned on at the power switch (see page 14). Press this button to turn the Display On, from Standby mode. Press it again to turn the Display Off to Standby mode.

**POS. /SIZE button**  
(see page 22)

**PICTURE button**  
(see page 24)

**Sound mute On / Off**  
Press this button to mute the sound.  
Press again to reactivate sound.  
Sound is also reactivated when power is turned off or volume level is changed.

**N button**  
(see page 23, 24, 25, 26)

**POSITION buttons**

 
**INPUT button**  
Press to select Input signal sequentially. (see page 16)

**ECO MODE (ECO)**  
Press to change the ECO MODE setup status. (see page 32)

**FUNCTION buttons (FUNCTION)**  
(see page 44)

### OFF TIMER button

The Display can be preset to switch to stand-by after a fixed period. The setting changes to 30 minutes, 60 minutes, 90 minutes and 0 minutes (off timer cancelled) each time the button is pressed.



When three minutes remain, "Off timer 3 min" will flash.  
The off timer is cancelled if a power interruption occurs.

### AUTO SETUP button

Automatically adjusts the position/size of the screen. (see page 22)

**SET UP button** (see page 21)

**SOUND button** (see page 26)

### Volume Adjustment

Press the Volume Up "+" or Down "-" button to increase or decrease the sound volume level.

**R button** (see page 21)

Press the R button to return to previous menu screen.


### RECALL button

Press the "RECALL" button to display the current system status.


- ① Input label
- ② Aspect mode (see page 19)
- ③ Off timer

The off timer indicator is displayed only when the off timer has been set.

- ④ Clock Display (see page 44)

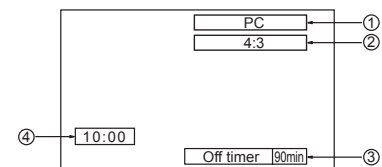

**Digital Zoom** (see page 20)

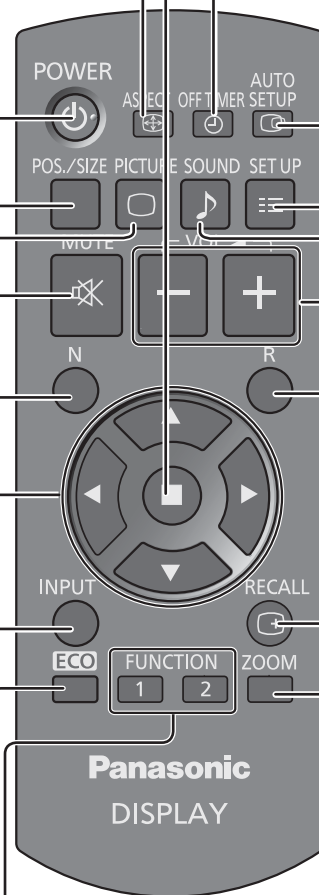

# ASPECT Controls

The Display will allow you to enjoy viewing the picture at its maximum size, including wide screen cinema format picture.

**Note:**

 
Be aware that if you put the display in a public place for commercial purposes or a public showing and then use the aspect mode select function to shrink or expand the picture, you may be violating the copyright under copyright law. It is prohibited to show or alter the copyrighted materials of other people for commercial purposes without the prior permission of the copyright holder.




ASPECT



Press repeatedly to move through the aspect options:



[from the unit]

 

The aspect mode changes each time the ENTER button is pressed.

**Note:**

 
The aspect mode is memorized separately for each input terminal.


Aspect mode	Picture → Enlarged screen	Description
16:9		The display of the pictures fills the screen. In the case of SD signals, pictures with a 4:3 aspect ratio are enlarged horizontally, and displayed. This mode is suited to displaying anamorphic pictures with a 16:9 aspect ratio.
4:3		Pictures with a 4:3 aspect ratio are displayed with their original aspect ratio. Side panels are displayed at the left and right edges of the screen.
		The pictures with a 4:3 aspect ratio among the 16:9 aspect ratio signals are displayed with their original aspect ratio. The left and right edges of the pictures are masked with side panels.
Zoom1		Letterbox pictures with a 16:9 aspect ratio are enlarged vertically and horizontally so that their display fills the screen. The top and bottom edges of the pictures are cut off.
Zoom2		Letterbox pictures with a 16:9 aspect ratio are enlarged vertically and horizontally so that their display fills the screen. The top and bottom edges as well as the left and right edges of the pictures are cut off.

# Digital Zoom

This displays an enlargement of the designated part of the displayed image.


## 1 Display the operation guide.

**ZOOM**  
 Press to access Digital Zoom.  
 The operation guide will be displayed.

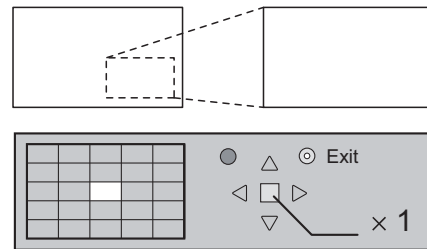


**During Digital Zoom, only the following buttons can be operated.**


[Remote control]

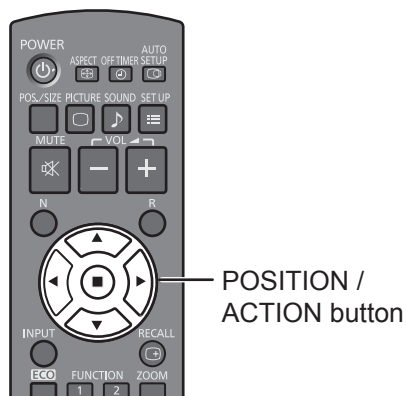

## 2 Select the area of the image to be enlarged.


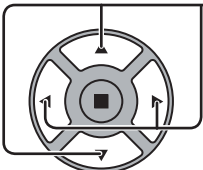
Press on the enlargement location to select.  


The cursor will move.

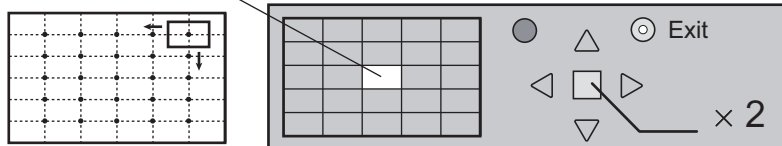


## 3 Select the magnification required for the enlarged display.

 Each time this is pressed, the magnification factor changes.  
 This is shown in the image being displayed.
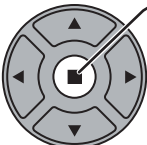
## 4 Return to normal display (quit Digital Zoom).

**R**  
 Press to exit from the Digital Zoom.

### Notes:

- When power goes OFF (including “Off Timer” operation), Digital Zoom terminates.
- The Digital Zoom function cannot be selected while in the following operation state:  
 When MULTI DISPLAY Setup is On (see page 35).  
 When Screensaver is running (see page 29)
- While Digital Zoom is in operation, “Adjusting Pos. / Size” cannot be used.

# On-Screen Menu Displays


## Remote Control

## Unit

### 1 Display the menu screen.




Press to select.  
(Example: Picture menu)

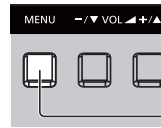


Press several times.

 
Each time the MENU button is pressed, the menu screen will switch.




### 2 Select the item.

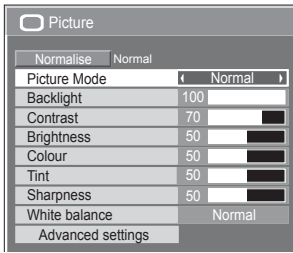

(Example: Picture menu)

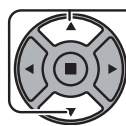

Select.

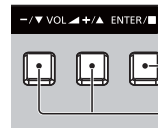


2 Press.

1 Select.

### 3 Set.



Adjust.

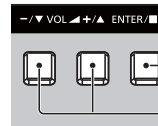


2 Press.

1 Adjust.

### 4 Exit the menu.



Press.  
Press  $\bigcirc$  to return to the previous menu.

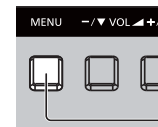


Press several times.

## Menu display list



**Note:** Menu that cannot be adjusted is grayout. Adjustable menu changes depending on signal, input and menu setting.

### Picture menu

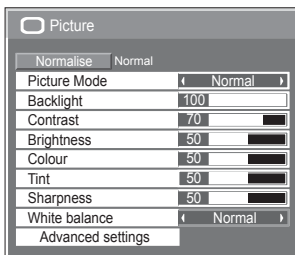


See page 24, 25

### Setup menu

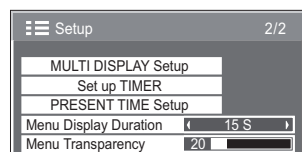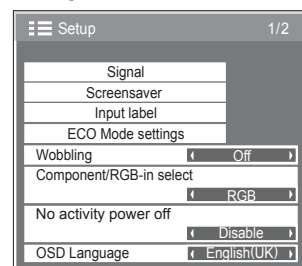


See page 27-41

### Pos./Size menu

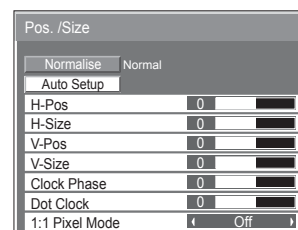


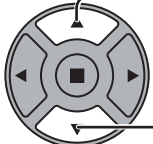
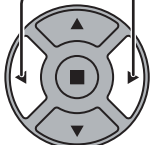

See page 22, 23


### Sound menu

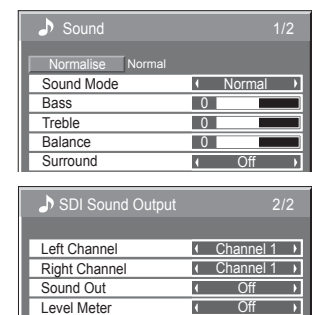

See page 26

# Adjusting Pos. /Size

- 1  Press to display the Pos. /Size menu.
- 2  Press to select the menu to adjust.
- 3  Press to adjust the menu.
- 4  Press to exit from adjust mode.

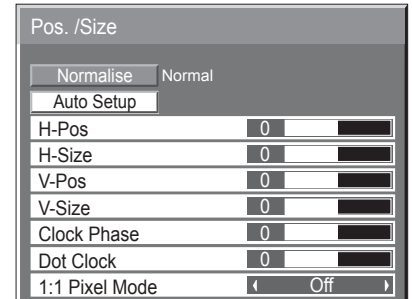

## Notes:

Unadjustable items are grayed out.

Adjustable items differ depending on the input signal and the display mode.

## Note:

If a "Cue" or "Rew" signal from a VCR or DVD player is received, the picture position will shift up or down. This picture position movement cannot be controlled by the Picture Pos./Size function.

**Auto Setup** H-Pos/V-Pos, H-Size/V-Size, Dot Clock and Clock Phase are automatically adjusted when the RGB or PC signal is received.

This setting only operates when a PC signal or RGB signal is input, and the aspect is "16:9".

## Using Remote Control







When  on the remote control is pressed, "Auto Setup" will be executed.

When Auto Setup does not work, "Invalid" is displayed.

## Notes:


- Auto Setup may not work when a cropped or dark image is input. In such case, switch to a bright image with borders and other objects are clearly shown, and then try auto setup again.
- Depending on the signal, out of alignment may occur after Auto Setup. Carry out fine tuning for the position/size as required.
- If Auto Setup cannot set properly for vertical frequency 60Hz XGA signal (1024×768@60Hz and 1366×768@60Hz), pre-selecting the individual signal in "XGA Mode" (see page 39) may results in correct Auto Setup.
- Auto Setup does not work well when a signal such as additional information is superimposed out of valid image period or intervals between synchronizing and image signals are short.
- If Auto Setup cannot adjust correctly, select "Normalise" once and press ACTION (■), then adjust Pos. /Size manually.
- If the picture goes off screen in the horizontal direction as a result of performing Auto Setup, perform Dot Clock adjustment.

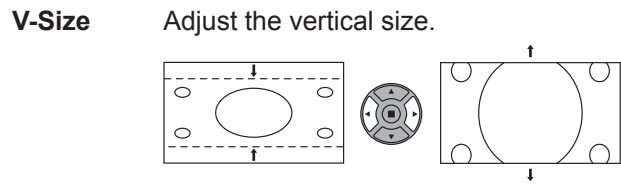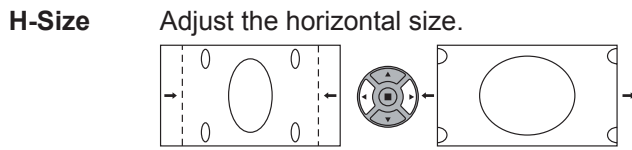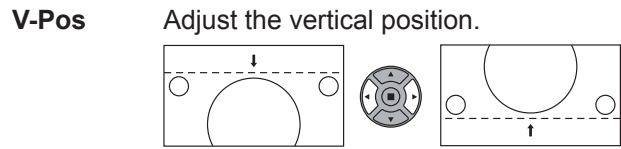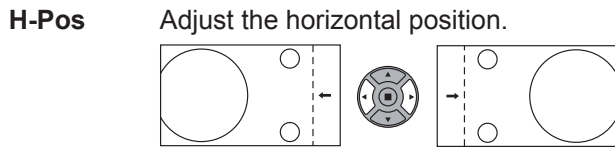

**Clock Phase** (During Component, RGB and PC input signal)  
Eliminate the flickering and distortion.

**Dot Clock** (During Component, RGB and PC input signal)  
Periodic striped pattern interference (noise) may occur when a striped pattern is displayed. If this happens, adjust so that any such noise is minimized.

**Over scan** Turn image over scan On/Off.  
Configurable signals are as follows:  
525i, 525p, 625i, 625p, 750/60p, 750/50p (Component Video, DVI, HDMI)

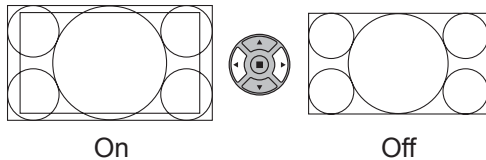

**Notes:**


- “Off” is effective during only “16:9” aspect mode.
- When “Off” is set, “H-Size” and “V-Size” cannot be adjusted.

**1:1 Pixel Mode** Adjusts the display size when 1125i or 1125p signal is input.


**Mode**

**Notes:**


- “On” is effective during only “16:9” aspect mode.
- Select On when you would like to replay 1920 × 1080 input signal.
- Applicable input signal;  
1125 (1080) / 50i · 60i · 24sF · 24p · 25p · 30p · 50p · 60p
- Select Off when flickering is shown around the image.
- H-Size and V-Size cannot be adjusted when On is selected.

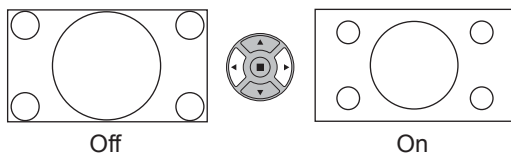

 
**Helpful Hint** (  / **Normalise** **Normalisation** )

While the Pos. / Size display is active, if either the N button on the remote control is pressed at any time or the ACTION (  ) button is pressed during “Normalise”, then all adjustment values (except “Clock Phase” and “Dot Clock”) are returned to the factory settings.


# Picture Adjustments

1  Press to display the Picture menu.

2 Select to adjust each item.

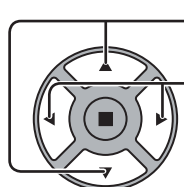 Press to select the menu to adjust.  
 Select the desired level by looking at the picture behind the menu.

**Note:**  
 Menu that cannot be adjusted is grayout. Adjustable menu changes depending on signal, input and menu setting.

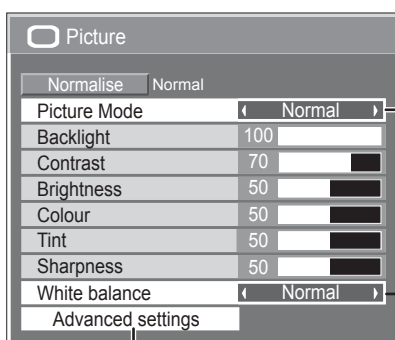

Press “◀” or “▶” button to switch between modes.




**Normal**  
 For viewing in standard (evening lighting) environments.  
 This menu selects the normal levels of Brightness and Contrast.


**Dynamic**  
 For viewing in brighter environments.  
 This menu selects higher than normal levels of Brightness and Contrast.

**Cinema**  
 Ideal for movies.

**Note:**  
 If you would like to change the picture and colour of the selected Picture menu to something else, adjust using the items in the Picture menu. (see next page)

 Press to enter Advanced settings .

**Advanced settings**  
 Enables fine picture adjustment at a professional level (see next page).

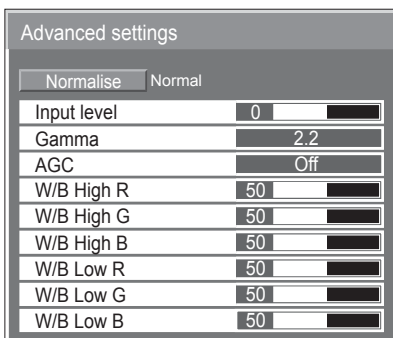

Press “◀” or “▶” button to switch between modes.















## Helpful Hint ( / Normalise Normalisation)

While the “Picture” menu is displayed, if either the N button on the remote control is pressed at any time or the ACTION (■) button is pressed during “Normalise”, then all adjustment values are returned to the factory settings.





















## Picture Adjustments

Item	Effect	Adjustments
<b>Backlight</b>	 Darker  Brighter	Adjusts luminance of the back light.
<b>Contrast</b>	 Less  More	Selects the proper brightness and density for the room.
<b>Brightness</b>	 Darker  Brighter	Adjusts for easier viewing of dark pictures such as night scenes and black hair.
<b>Colour</b>	 Less  More	Adjusts colour saturation.
<b>Tint</b>	 Reddish  Greenish	Adjusts for nice skin colour.
<b>Sharpness</b>	 Less  More	Adjusts picture sharpness.

### Notes:

- “Colour” setting can be adjusted for Video input signal.
- You can change the level of each function (Backlight, Contrast, Brightness, Colour, Tint, Sharpness) for each Picture Mode.
- The setting details for normal, dynamic and cinema respectively are memorized separately for each input terminal.
- The “Tint” setting can be adjusted for NTSC signal only during Video input signal.
- “Backlight” can be adjusted when “ECO Mode” is set to “Custom” and “Power save” to “Off”. (see page 32)


## Advanced settings

Item	Effect	Details
<b>Input level</b>	 Less  More	Adjustment of parts which are extremely bright and hard to see.
<b>Gamma</b>	 Down  Up	S Curve $\longleftrightarrow$ 2.0 $\longleftrightarrow$ 2.2 $\longleftrightarrow$ 2.6
<b>AGC</b>	 Off  On	Increases the brightness of dark signal automatically.
<b>W/B High R</b>	 Less  More	Adjusts the white balance for light red areas.
<b>W/B High G</b>	 Less  More	Adjusts the white balance for light green areas.
<b>W/B High B</b>	 Less  More	Adjusts the white balance for light blue areas.
<b>W/B Low R</b>	 Less  More	Adjusts the white balance for dark red areas.
<b>W/B Low G</b>	 Less  More	Adjusts the white balance for dark green areas.
<b>W/B Low B</b>	 Less  More	Adjusts the white balance for dark blue areas.


### Notes:

- Carry out “W/B” adjustment as follows.
  1. Adjust the white balance of the bright sections using the “W/B High R”, “W/B High G” and “W/B High B” settings.
  2. Adjust the white balance of the dark sections using the “W/B Low R”, “W/B Low G” and “W/B Low B” settings.
  3. Repeat steps 1 and 2 to adjust.
 Steps 1 and 2 affect each other’s settings, so repeat each step in turn to make the adjustment.
- The adjustment values are memorized separately for each input terminal.
- The adjustment range values should be used as an adjustment reference.


### Helpful Hint ( / **Normalise** **Normalisation** )

On the remote control unit, while the “Advanced settings” menu is displayed, if either the N button is pressed at any time or the ACTION (  ) button is pressed during “Normalise”, then all adjustment values are returned to the factory settings.


# Sound Adjustment

**1**  Press to display the Sound menu.

**2** Select to adjust each item.

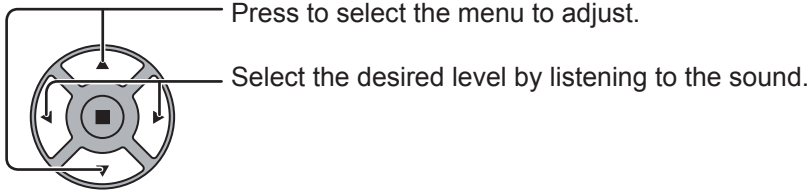


**3**  Press to exit from adjust mode.

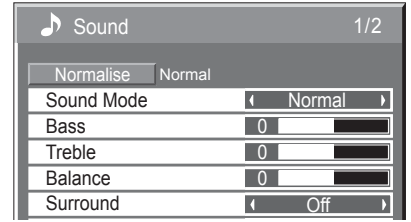

Item	Details
<b>Sound Mode</b>	<b>Normal:</b> Emits the original sound. <b>Dynamic:</b> Accentuates sharp sound. <b>Clear:</b> Attenuates human voice.
<b>Bass</b>	Adjusts low pitch sounds.
<b>Treble</b>	Adjusts high pitch sounds.
<b>Balance</b>	Adjusts left and right volumes.
<b>Surround</b>	Select On or Off.


**Note:** Bass, Treble and Surround settings are memorized separately for each Sound Mode.

## Helpful Hint ( / **Normalise** Normalisation)

While the "Sound" menu is displayed, if either the N button on the remote control is pressed at any time or the ACTION () button is pressed during "Normalise", then all adjustment values are returned to the factory settings.

# SDI Sound Output

This menu is available only when selecting a slot that the following terminal board is installed:  
HD-SDI Terminal Board with audio (TY-FB10HD)

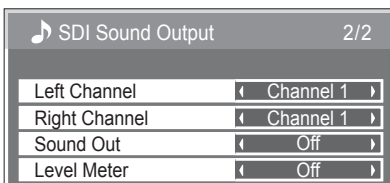
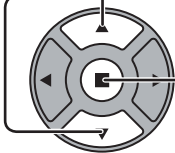



Item	Details
<b>Left Channel</b>	<b>Channel 1 to Channel 16</b> Selects left audio channel.
<b>Right Channel</b>	<b>Channel 1 to Channel 16</b> Selects right audio channel.
<b>Sound Out</b>	<b>On</b> $\longleftrightarrow$ <b>Off</b> <b>On:</b> Enables audio output. <b>Off:</b> Disables audio output.
<b>Level Meter</b>	<b>Off</b> $\longleftrightarrow$ <b>1-8ch</b> $\longleftrightarrow$ <b>9-16ch</b> Sets audio channels to show in the audio level meter. 8 channels are displayed in the audio level meter; 4 channels each on both right and left sides of the display. <b>Off:</b> Hides the audio level meter. <b>1-8ch:</b> Displays the audio level meter (1-8ch) <b>9-16ch:</b> Displays the audio level meter (9-16ch)

# PRESENT TIME Setup / Set up TIMER


The timer can switch the Display On or Off.

Before attempting Timer Set, confirm the PRESENT TIME and adjust if necessary.  
Then set POWER ON Time / POWER OFF Time.

-  Press to display the Setup menu.
-  Press to select Set up TIMER or PRESENT TIME Setup.  
Press to display the Set up TIMER screen or PRESENT TIME Setup screen.

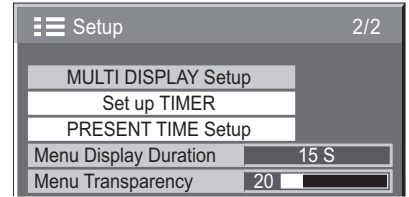



## PRESENT TIME Setup

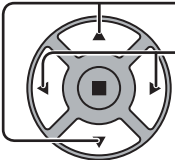-  Press to select DAY or PRESENT TIME.  
Press to setup DAY or PRESENT TIME.  
▶ button: Forward  
◀ button: Back

**Notes:**

- Pressing “◀” or “▶” button once changes PRESENT TIME 1 minute.
- Pressing “◀” or “▶” button continuously changes PRESENT TIME by 15 minutes.

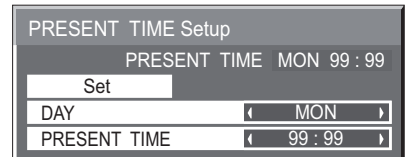

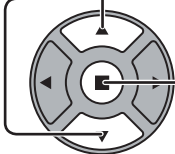-  Press to select Set.  
Press to store PRESENT TIME Setup.

**Notes:**

- Set cannot be selected unless PRESENT TIME is set.
- Unless setting the present time other than “99:99”, “DAY” and “PRESENT TIME” can not be set.
- The settings of “DAY” and “PRESENT TIME” are reset when leaving the display turned off for about 7 days for the following reasons:  
Pressing  $\odot/|$  switch of the unit to turn off the display.  
Disconnecting the AC cord.  
Interruption of power supply.


## Set up TIMER

Set the program for turning the power On/Off and select the input signal at the specified time. Up to 20 programs can be set.

### [Setting Example]

Program 1, Every Monday, 12:00, Power On, Input: VIDEO

Set up TIMER	
PRESENT TIME MON 0 : 03	
Program	1
Timer Function	On
Day	MON
Power Mode	Power On
Time	12 : 00
Input	VIDEO

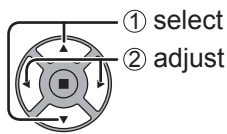

① select  
② adjust

- 1 Set the program number.
- 2 To execute the program, set to "On".  
The program is disabled when "Off" is set.
- 3 Set the day.  
The program is executed every day when "Everyday" is set.
- 4 Set the power On/Off.
- 5 Set the time.  
Pressing "◀" or "▶" button once changes "Time" 1 minute.  
Pressing "◀" or "▶" button continuously changes "Time" by 15 minutes.
- 6 Set the input.

### Notes:

- This function cannot be set unless "PRESENT TIME Setup" is set.
- If more than one programs are set for the same time, only the program with the smallest program number is enabled.


# Screensaver (For preventing image retention)


Do not display a still picture, especially in 4:3 mode, for any length of time.


If the display must remain on, a Screensaver should be used.

When the screen saver is operating, the following 5 patterns are displayed full screen for 5 seconds each.


Black→Dark Gray→Gray→Light Gray→White

**1**  Press to display the Setup menu.

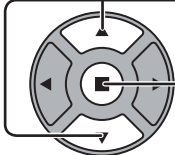**2**  Press to select Screensaver.  
Press to display Screensaver screen.

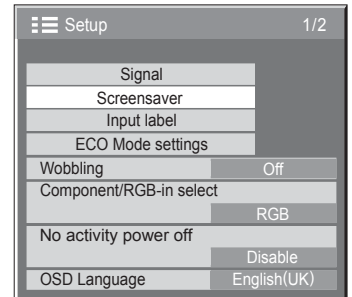


## 3 Mode selection

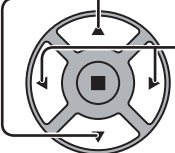 Press to select Mode.  
Press to select each mode items.

- Off
- ↕
- Interval : Operates when Periodic Time and Operating Time are setup and those times arrive.
- ↕
- Time Designation : Operates when Start Time and Finish Time are setup and those times arrive.
- ↕
- Standby after SCR Saver: Operates while Screensaver duration, and display enters standby mode.
- ↕
- On : Operates when Start is selected and the ACTION (■) button is pressed.

## 4 Start setting




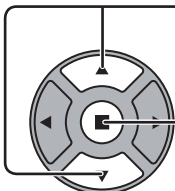
 When the Mode is set to On, press to select Start.  
Press to start Screensaver.

The menu screen will disappear and the Screensaver will be activated. **To stop the Screensaver under On, press the R button or any buttons on the main unit.**

**Note:** When the display is turned off, the Screensaver will be deactivated.

## Setup of Screensaver Time

After selecting Time Designation, Interval or Standby after SCR Saver, the relevant Time Setup will become available for selection and the Operating Time may be set. (Time cannot be set when “Mode” is “On” or “Off”.)

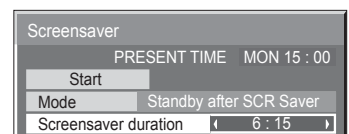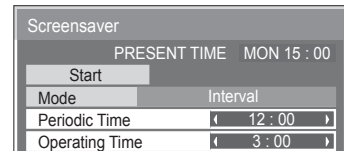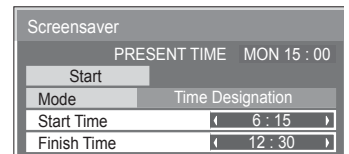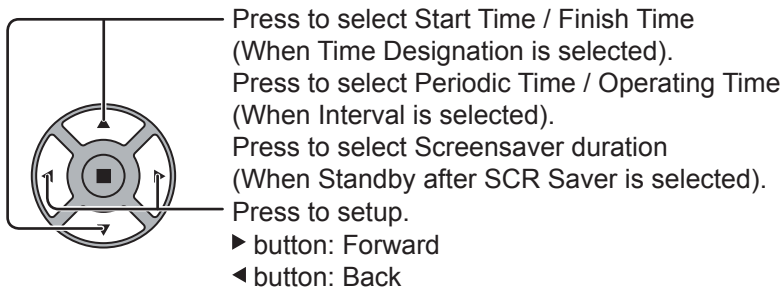



### Notes:

- Pressing “◀” or “▶” button once changes the Time 1 minute.  
[However, switching occurs every 15 minutes when Periodic Time is selected.]
- Pressing “◀” or “▶” button continuously changes the Time by 15 minutes.
- “Screensaver duration” of the “Standby after SCR Saver” can be set from 0:00 to 23:59. When this is set to “0:00”, “Standby after SCR Saver” will not be activated.

**Note:** Timer function will not work unless “PRESENT TIME” is set.

## Wobbling





Automatically shifts the display image (therefore unnoticeable to the eye) to prevent image retention of sharper contour of image.

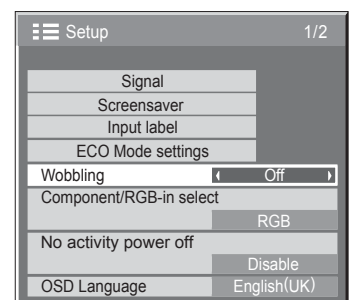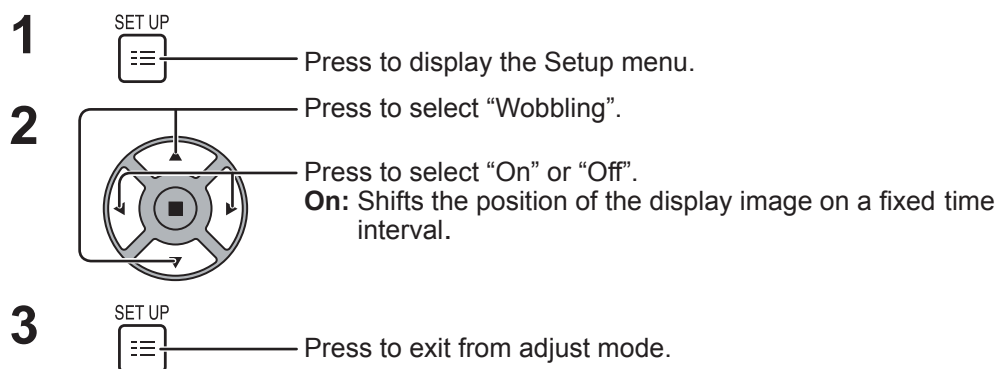

### Notes:


- If “MULTI DISPLAY Setup” is set to “On”, this function does not operate.
- When this function is operating, part of the screen may appear to be missing.
 
# No activity power off

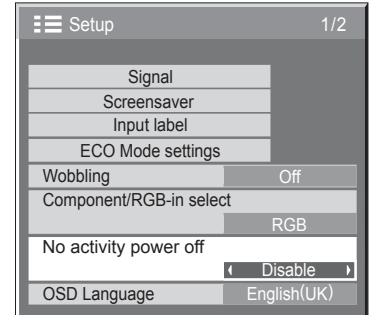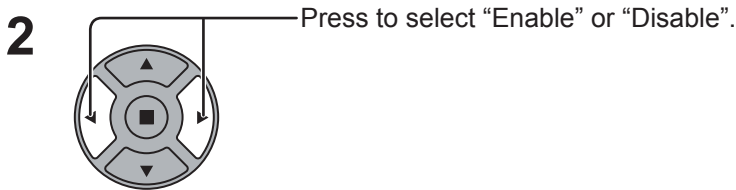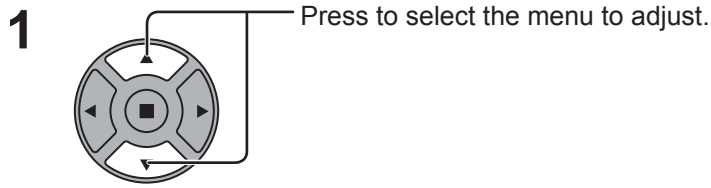

When this function is set to "Enable", the power is turned off (standby) automatically when there is no operation of the Display for 4 hours.

Starting from 3 minutes before the turn off, the remaining time will be displayed.

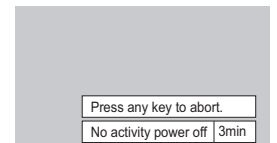


When the power is turned off due to this function, a message "Last turn off due to 'No activity power off'." is displayed next time the power is turned on.

**Note:**

During the screensaver is running, this function is disabled.

# ECO Mode settings

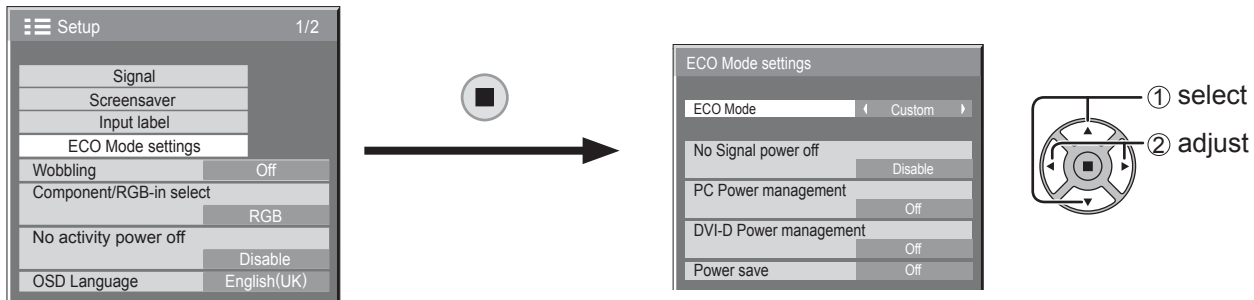

## ECO Mode

**Custom:** The menu of power consumption reduction is individually set.

**On:** The following fixed values are set to the menu of power consumption reduction. Individual setting is not available.

No Signal power off: Enable  
PC Power management: On  
DVI-D Power management: On  
Power save: Sensor

### Using Remote Control

When **ECO** is pressed, the "ECO Mode" setting changes.

ECO Mode On

## Custom settings

The menu of the power consumption reduction is individually set. This setting is enabled when "ECO Mode" is set to "Custom".

### No signal power off

Equipment power supply is turned Off when there is no signal.

When this is set to "Enable", the power supply of the unit goes Off 10 minutes after the input signals stop.

#### Note:

This function is effective during normal viewing (one picture screen).

### PC Power management

When this function is set to On, it operates under the following conditions to turn the power on or off automatically.

When no pictures are detected for 30 or so seconds during PC signal input:

→ Power is turned off (standby); the power indicator lights up orange.

When pictures are subsequently detected:

→ Power is turned on; the power indicator lights up green.

#### Notes:

- This function operates only during input from PC IN terminal.
- This function is effective when "Sync" is set to "Auto" and during normal viewing (one picture screen).

### DVI-D Power management

When this function is set to On, it operates under the following conditions to turn the power on or off automatically.

When no pictures (sync signal) are detected for 30 or so seconds during DVI signal input:

→ Power is turned off (standby); the power indicator lights up orange.

When pictures (sync signal) are subsequently detected:

→ Power is turned on; the power indicator lights up green.

#### Note:

This function operates only during DVI signal input.

### Power save

This function adjusts the brightness of the backlight to reduce power consumption.

**Off:** This function does not operate.

**On:** Backlight brightness is reduced.

**Sensor:** The backlight brightness is automatically adjusted according to the viewing environment.


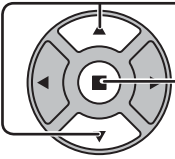
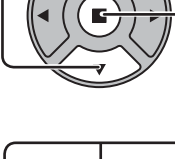
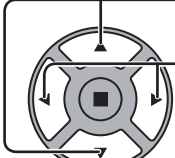

#### Note:

When this function is set to "On" or "Sensor", the "Backlight" setting in the Picture menu is disabled.



# Customizing the Input labels

This function can change the label of the Input signal to be displayed. (see page 16)

- 1  Press to display the Setup menu.
- 2  Press to select Input label.  
 Press to display the Input label screen.
- 3  Press to select image input.  
 Press to change input label.






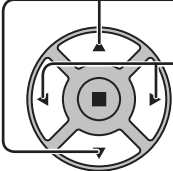
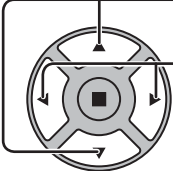
Image input	Input label
[SLOT INPUT]*1	SLOT INPUT / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)
[VIDEO]	VIDEO / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)
[Component]*2	Component / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)
[PC]	PC / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)
[DVI]	DVI / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)
[HDMI1]	HDMI1 / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)
[HDMI2]	HDMI2 / DVD1 / DVD2 / DVD3 / Blu-ray1 / Blu-ray2 / Blu-ray3 / CATV / VCR / STB / (Skip)

(Skip): The INPUT button press will skip its input.

\*1 "SLOT INPUT" is displayed when a Terminal Board is installed.


\*2 "Component" may be displayed as "RGB" depending on the setting of "Component/RGB-in select". (see page 37)
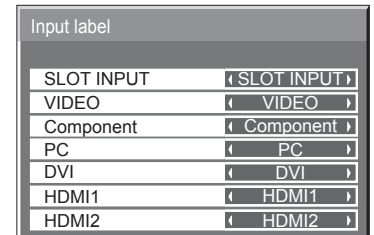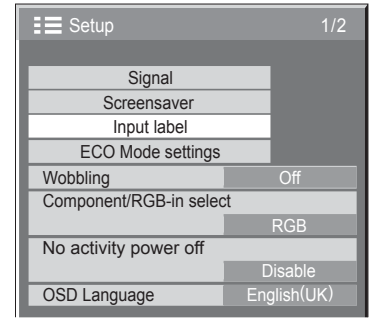
# Selecting the On-Screen Menu Language

-  Press to display the Setup menu.
-  Press to select the OSD Language.  
 Press to select your preferred language.


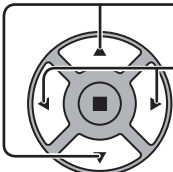
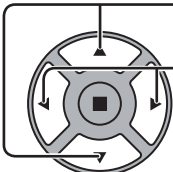
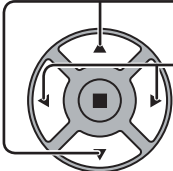
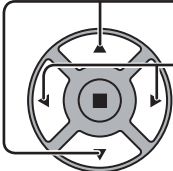

## ■ Selectable languages


- English (UK)
- ↕
- Deutsch
- ↕
- Français
- ↕
- Italiano
- ↕
- Español
- ↕
- English (US)
- ↕
- 中文.....(Chinese)
- ↕
- 日本語.....(Japanese)
- ↕
- Русский.....(Russian)

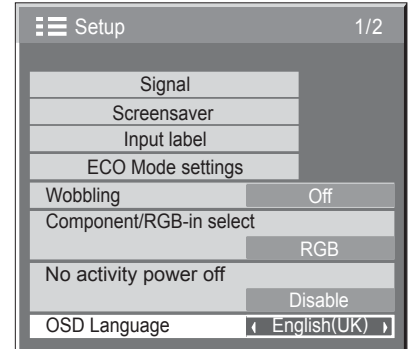

# Customizing the On-Screen Menu Display

Set the display time and background transparency of the on-screen menu display.

-  Press to display the Setup menu.
-  Press to select "Menu Display Duration".  
 Press to adjust the display duration.
-  Press to select "Menu Transparency".  
 Press to adjust the transparency.
-  Press to exit from adjust mode.

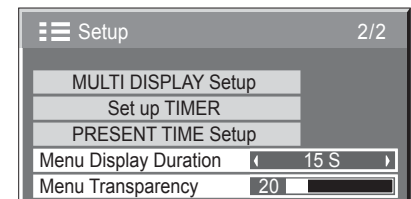

# Setup for MULTI DISPLAY

By lining up the Displays in groups, for example, as illustrated below, an enlarged picture may be displayed across all screens.

For this mode of operation, each display has to be set up with a Display number to determine its location.

(Example)

group of 4 (2 × 2)



group of 9 (3 × 3)




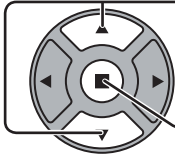
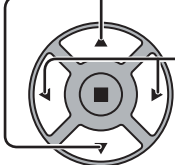
group of 16 (4 × 4)







group of 25 (5 × 5)



## How to Setup MULTI DISPLAY


- 1  Press to display the Setup menu.
- 2  Press to select the MULTI DISPLAY Setup.  
Press to display the "MULTI DISPLAY Setup" menu.
- 3  Press to select the MULTI DISPLAY Setup.  
Press to select "On" or "Off".

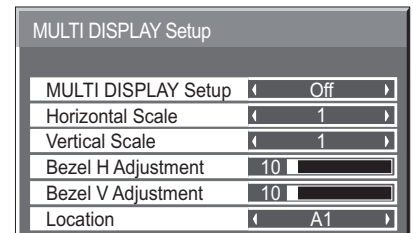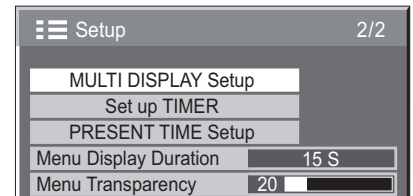

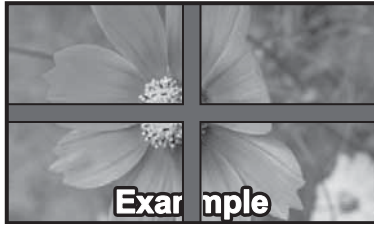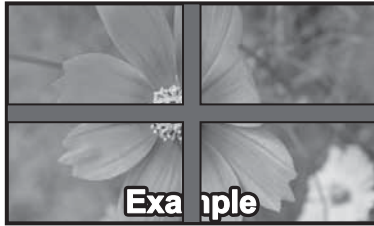Item	Details
<b>MULTI DISPLAY Setup</b>	Select "On" or "Off".
<b>Horizontal Scale</b>	Select "1", "2", "3", "4", "5".
<b>Vertical Scale</b>	Select "1", "2", "3", "4", "5".
<b>Bezel H Adjustment Bezel V Adjustment</b>	<p>Areas of the image that are hidden by the joint sections are adjusted both horizontally and vertically (0~100).</p> <p>To show joints between displays.</p>  <p><b>Example</b></p> <p>Suitable for still image display. Setting value: 0</p> <p>To hide joints between displays.</p>  <p><b>Example</b></p> <p>Suitable for moving image display. Setting value: 100</p>

# Setup for MULTI DISPLAY

Item	Details																																																									
	Select the required arrangement number. (A1-E5 : Refer to the following) <b>Display Number locations for each arrangement.</b> <b>(Examples)</b> ( 2 × 1 )    ( 2 × 3 )    ( 4 × 2 )    ( 4 × 4 )    ( 5 × 5 )																																																									
Location	<table border="1" style="display: inline-table; margin-right: 10px;"> <tr><td>A1</td><td>A2</td></tr> </table> <table border="1" style="display: inline-table; margin-right: 10px;"> <tr><td>A1</td><td>A2</td></tr> <tr><td>B1</td><td>B2</td></tr> <tr><td>C1</td><td>C2</td></tr> </table> <table border="1" style="display: inline-table; margin-right: 10px;"> <tr><td>A1</td><td>A2</td><td>A3</td><td>A4</td></tr> <tr><td>B1</td><td>B2</td><td>B3</td><td>B4</td></tr> </table> <table border="1" style="display: inline-table; margin-right: 10px;"> <tr><td>A1</td><td>A2</td><td>A3</td><td>A4</td></tr> <tr><td>B1</td><td>B2</td><td>B3</td><td>B4</td></tr> <tr><td>C1</td><td>C2</td><td>C3</td><td>C4</td></tr> <tr><td>D1</td><td>D2</td><td>D3</td><td>D4</td></tr> </table> <table border="1"> <tr><td>A1</td><td>A2</td><td>A3</td><td>A4</td><td>A5</td></tr> <tr><td>B1</td><td>B2</td><td>B3</td><td>B4</td><td>B5</td></tr> <tr><td>C1</td><td>C2</td><td>C3</td><td>C4</td><td>C5</td></tr> <tr><td>D1</td><td>D2</td><td>D3</td><td>D4</td><td>D5</td></tr> <tr><td>E1</td><td>E2</td><td>E3</td><td>E4</td><td>E5</td></tr> </table>	A1	A2	A1	A2	B1	B2	C1	C2	A1	A2	A3	A4	B1	B2	B3	B4	A1	A2	A3	A4	B1	B2	B3	B4	C1	C2	C3	C4	D1	D2	D3	D4	A1	A2	A3	A4	A5	B1	B2	B3	B4	B5	C1	C2	C3	C4	C5	D1	D2	D3	D4	D5	E1	E2	E3	E4	E5
A1	A2																																																									
A1	A2																																																									
B1	B2																																																									
C1	C2																																																									
A1	A2	A3	A4																																																							
B1	B2	B3	B4																																																							
A1	A2	A3	A4																																																							
B1	B2	B3	B4																																																							
C1	C2	C3	C4																																																							
D1	D2	D3	D4																																																							
A1	A2	A3	A4	A5																																																						
B1	B2	B3	B4	B5																																																						
C1	C2	C3	C4	C5																																																						
D1	D2	D3	D4	D5																																																						
E1	E2	E3	E4	E5																																																						




 





**4**  Press to exit from Setup.


## ID Remote Control Function

 You can set the remote control ID when you want to use this remote control on one of several different displays.

**Note:**

To operate this function, please purchase ID remote controller sold separately.  
 Object model : EUR7636090R


- 1** Switch  to  on the right side.
- 2** Press the  button on the remote control.
- 3** Press one of  - ,  for the tens digit setting.
- 4** Press one of  - ,  for the units digit setting.

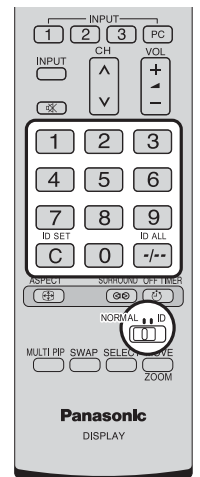

**Notes:**

- The numbers in 2, 3 and 4 should be set up quickly.
- Adjustable ID number range is 0 - 99.
- If a number button is pressed more than two times, the first two numbers become the ID number for the remote control.

### ID remote control button operation

The operation is the same as normal remote control except for the  button.

### ID Cancellation

Press  button on remote control. (This has the same effect as pressing the , ,  buttons at the same time.)

**Notes:**

- Set the Remote ID “On” to operate the ID remote control.  
 If Remote ID is set to “On”, you can use the remote control without identical ID number during option menu display. (see page 43)
- The ID remote control cannot be used when ID select is set to anything other than 0, and the remote control ID is not the same as the ID select number (see page 43).


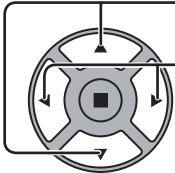

# Setup for Input Signals


## Component / RGB-in select

Select to match the signals from the source connected to the COMPONENT/RGB IN terminal.

Y, P<sub>B</sub>, P<sub>R</sub> signals ⇔ “Component”

RGB signals ⇔ “RGB”

-  Press to display the Setup menu.
-  Press to select the “Component / RGB-in select”.  
Press to select the desired input signal.  
Component ← → RGB
-  Press to exit from adjust mode.

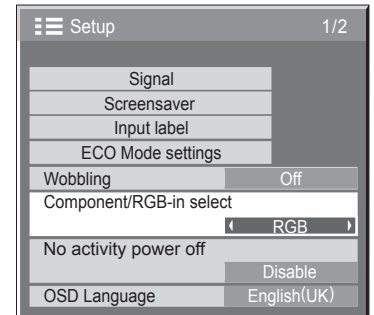

### Note:


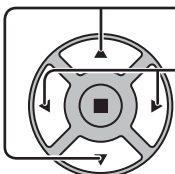

Make setting of the selected input terminal (COMPONENT/RGB IN).


## YUV / RGB-in select

Select to match the signals from the source connected to DVI-D IN terminal.

YUV signals ⇔ “YUV”

RGB signals ⇔ “RGB”


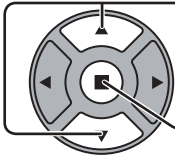
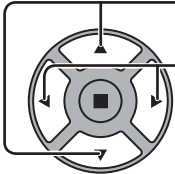

-  Press to display the Setup menu.
-  Press to select the “YUV / RGB-in select”.  
Press to select the desired mode.  
YUV ← → RGB
-  Press to exit from adjust mode.

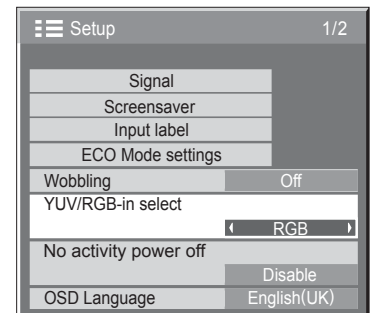


## Signal menu

**Note:**


“Signal” setup menu displays a different setting condition for each input signal.

- 1  Press to display the Setup menu.
- 2  Press to select the “Signal”.  
Press to display the Signal menu.
- 3  Press to select the menu to adjust.  
Press to adjust the menu.
- 4  Press to exit from adjust mode.

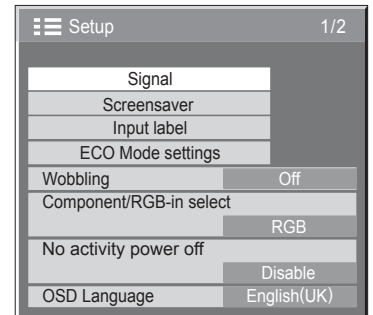


↓ Press ACTION (■) button


**For Video**

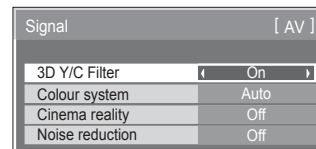


**For RGB**

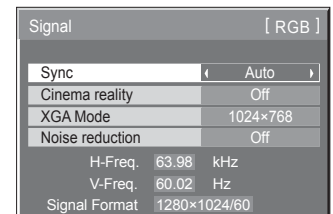

**For Component**

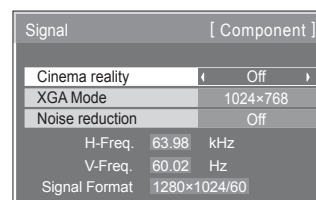



**For Digital**

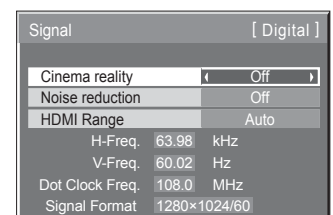

## 3D Y/C Filter



Select “Signal” from the “Setup” menu during Video input signal. (“Signal [AV]” menu is displayed.)

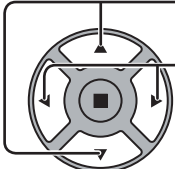- 1  Press to select the “3D Y/C Filter”
- 2  Press to set On / Off.



## Colour system

Select Signal from the "Setup" menu during Video input signal. ("Signal [AV]" menu is displayed.)

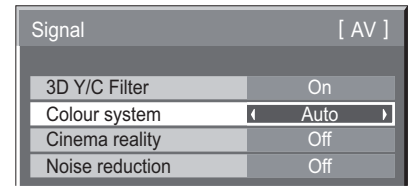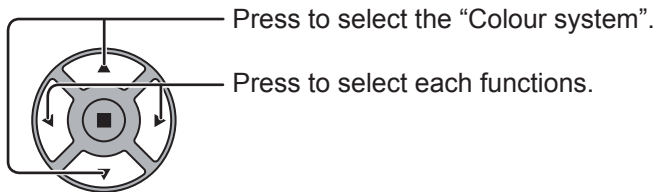

### If the picture image becomes unstable:

With the system set on Auto, under conditions of low level or noisy input signals the image may in rare cases become unstable. Should this occur, set the system to match the format of the input signal.

**Colour system:** Set the colour system to match the input signal. When "Auto" is set, Colour system will be automatically selected from NTSC/PAL/SECAM/NTSC 4.43/PAL M/PAL N.

To display PAL60 signal, select "Auto".

→Auto ↔ PAL ↔ SECAM ↔ NTSC ↔ NTSC 4.43 ↔ PAL M ↔ PAL N ←

## Cinema reality


### Cinema reality:

When on, the display attempts to reproduce a more natural interpretation of sources such as movie pictures, which are recorded at 24 frames per second. If the picture is not stable, turn the setting to off.

#### Note:

When On, this setting only affects the following signal input:


- NTSC / PAL signal input during Video input signal.
- 525i (480i), 625i (575i), 1125 (1080) / 60i signal input during Component input signal.

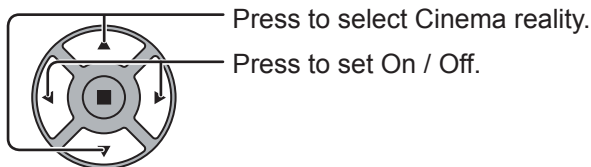

## XGA Mode

This menu is displayed when the input signal is analog (Component/PC). This menu sets two types of XGA signals with 60Hz vertical frequency having different aspect ratios and sampling rates (1,024 × 768 @ 60Hz and 1,366 × 768 @ 60Hz).


When a 1,280 × 768 @ 60Hz input signal is automatically detected, the image is processed as a 1,280 × 768 @ 60Hz XGA input signal irrespective of this setting.

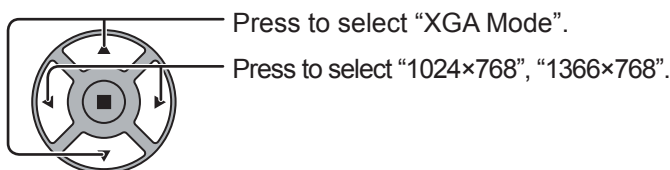

#### Note:

After making this setting, be sure to make each adjustment (such as "Auto Setup") on the "Pos. /Size" menu as necessary. (see page 22)

## Noise reduction

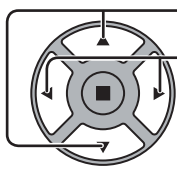

Press to select "Noise reduction".

Press to select "Off", "Auto", "Min", "Mid", "Max".

**Auto:** Noise reduction will be automatically selected from "Min", "Mid" or "Max".




**Note:**

Noise reduction can be adjusted while a Video or Component signal is being applied.


## Sync

This function operates only during input from PC IN terminal.

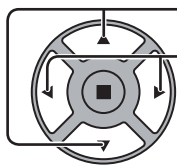

Press to select the "Sync".

Press to adjust.

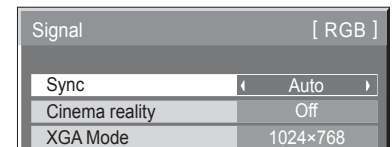

Confirm that the input is set to RGB input (this setting is valid only for RGB input signal).

**Auto:** The H and V sync or synchronized signal is automatically selected. If both input, it is selected the H and V sync. However, the synchronized signal that is input first is selected.




**on G:** Uses a synchronized signal on the Video G signal, which is input from the G connector.

**Note:**

Accepts only RGB signals from COMPONENT/RGB IN terminal with "Sync on G"


## HDMI Range

Switches the dynamic range according to the input signal from HDMI terminal.

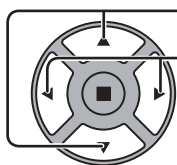

Press to select "HDMI Range".

Press to select "Video(16-235)", "Full(0-255)", "Auto".

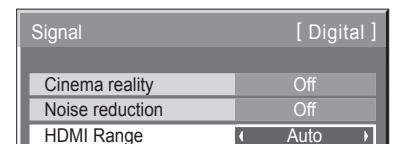

**Video(16-235):** If the input signal is the video range, Example: HDMI terminal output for DVD player

**Full(0-255):** If the input signal is full range, Example: HDMI terminal output for personal computer

**Auto:** Switches the dynamic range automatically between "Video(16-235)" and "Full(0-255)" according to the input signal.

**Note:**

This function can be set only for HDMI signal input.



## Input signal display

---

Displays the frequency and the type of the current input signal.

This display is valid only for Component / RGB / PC and Digital input signal.

Display range:

Horizontal 30 - 110 kHz

Vertical 48 - 120 Hz

H-Freq.	63.98	kHz
V-Freq.	60.02	Hz
Signal Format	1280×1024/60	


The dot clock frequency is displayed during digital signal input.


H-Freq.	63.98	kHz
V-Freq.	60.02	Hz
Dot Clock Freq.	108.0	MHz
Signal Format	1280×1024/60	


**Note:**

The automatically detected signal format may be displayed differently than the actual input signal.


# Options Adjustments


1  Press to display the Setup menu.

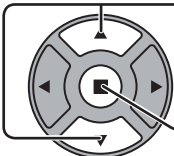2  Press to select "OSD Language".  
Press for more than 3 seconds.

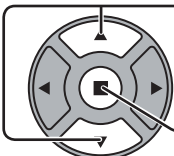3  Press to select "Options".  
Press to display the Options menu.



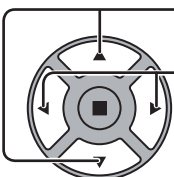


4  Press to select your preferred menu.  
Press to adjust the menu.
























5  Press to exit from Options menu.

Options 1/3	
On screen display	◀ On ▶
Initial input	◀ Off ▶
Failover input	◀ Off ▶
Initial VOL level	◀ Off 0 ▶
Maximum VOL level	◀ Off 0 ▶
Input lock	◀ Off ▶
Button lock	◀ Off ▶
Remocon User level	◀ Off ▶

Options 2/3	
Off-timer function	Enable ▶
Initial Power Mode	◀ Normal ▶
ID select	◀ 0 ▶
Remote ID	◀ Off ▶
Serial ID	◀ Off ▶
Serial Daisy Chain	◀ --- ▶
Studio W/B	◀ Off ▶

Options 3/3	
Slot power	◀ Off ▶
Power ON Screen Delay	◀ Off ▶
Clock Display	◀ Off ▶
Power On Message (No activity power off)	◀ On ▶
Function button assign 1	◀ Signal ▶
Function button assign 2	◀ Screensaver ▶

Item	Adjustments
<b>On screen display</b>	<p><b>On:</b> Displays all the following on screen.</p> <ul style="list-style-type: none"> <li>• Power on display</li> <li>• Input signal switch display</li> <li>• No signal display</li> <li>• Mute and the remaining time of off-timer after  was pressed.</li> </ul> <p><b>Off:</b> Hides all the items above from view.</p>
<b>Initial input</b>	<p>Adjusts the input signal when the unit is turned on.</p> <p><b>Off</b> ↔ <b>SLOT INPUT*</b> ↔ <b>VIDEO</b> ↔ <b>Component/RGB</b> ↔ <b>PC</b> ↔ <b>DVI</b> ↔ <b>HDMI1</b> ↔ <b>HDMI2</b> ↔ <b>Off</b></p> <p>* "SLOT INPUT" is displayed when an optional Terminal Board is installed.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Only the adjusted signal is displayed. (see page 16)</li> <li>• This menu is available only when "Input lock" is "Off".</li> </ul>
<b>Failover input</b>	<p>When there is no signal, the specified input signal is automatically switched to.</p> <p><b>Off</b> ↔ <b>SLOT INPUT*</b> ↔ <b>VIDEO</b> ↔ <b>Component/RGB</b> ↔ <b>PC</b> ↔ <b>DVI</b> ↔ <b>HDMI1</b> ↔ <b>HDMI2</b> ↔ <b>Off</b></p> <p>* "SLOT INPUT" is displayed when an optional Terminal Board is installed.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• When other than "Off" is set, "Input lock" will be grayed out and cannot be set.</li> <li>• When "Input lock" is set to other than "Off", this setting will be grayed out and cannot be set.</li> </ul>
<b>Initial VOL level</b>	<p>Press  button to adjust the volume when the unit is turned on.</p> <p><b>Off</b> ↔ <b>On</b></p> <p><b>Off:</b> Sets normal volume.</p> <p><b>On:</b> Sets your preferred volume.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• When "Maximum VOL level" is "On", the volume can only be adjusted between 0 and your maximum range.</li> <li>• You can hear the changed volume regardless of your volume setting before opening the options menu if you adjust the volume when "Initial VOL level" is "On" and cursor is on the menu.</li> </ul>
<b>Maximum VOL level</b>	<p>Press  button to adjust the maximum volume.</p> <p><b>Off</b> ↔ <b>On</b></p> <p><b>Off:</b> Sets auto maximum volume.</p> <p><b>On:</b> Sets your preferred maximum volume.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• If the "Maximum VOL level" is set lower than the "Initial VOL level", the "Initial VOL level" automatically becomes the same as the "Maximum VOL level".</li> <li>• The volume display can go up to 100 regardless of the settings.</li> <li>• You can hear the changed volume regardless of your volume setting before opening the options menu if you adjust the volume when "Maximum VOL level" is "On" and cursor is on the menu.</li> </ul>

Item	Adjustments
<b>Input lock</b>	<p>Locks the input switch operation.</p> <p><b>Off</b> ↔ <b>SLOT INPUT*</b> ↔ <b>VIDEO</b> ↔ <b>Component/RGB</b> ↔ <b>PC</b> ↔ <b>DVI</b> ↔ <b>HDMI1</b> ↔ <b>HDMI2</b> ↔ <b>Off</b></p> <p>* "SLOT INPUT" is displayed when an optional Terminal Board is installed.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Only the adjusted signal is displayed (see page 16).</li> <li>• Input switch can be used when this is set to "Off".</li> </ul>
<b>Button lock</b>	<p><b>Off</b> ↔ <b>On</b> ↔ <b>MENU&amp;ENTER</b></p> <p><b>Off:</b> All the buttons on main unit can be used.</p> <p><b>MENU&amp;ENTER:</b> Locks  and  buttons on main unit.</p> <p><b>On:</b> Locks all the button on main unit.</p> <p>Sets Button lock with the unit buttons in the following procedure.</p> <p><b>Off:</b> Press  four times → Press  four times → Press  four times → Press  four times → Press  four times</p> <p><b>MENU&amp;ENTER:</b> Press  four times → Press  four times → Press  four times → Press  four times → Press  four times</p> <p><b>On:</b> Press  four times → Press  four times → Press  four times → Press  four times</p>
<b>Remocon User level</b>	<p><b>Off</b> ↔ <b>User1</b> ↔ <b>User2</b> ↔ <b>User3</b></p> <p><b>Off:</b> You can use all of the buttons on the remote control.</p> <p><b>User1:</b> You can only use , , , , ,  buttons on the remote control.</p> <p><b>User2:</b> You can only use  button on the remote control.</p> <p><b>User3:</b> Locks all the buttons on remote control.</p>
<b>Off-timer function</b>	<p><b>Enable:</b> Enables the "Off-timer function".</p> <p><b>Disable:</b> Disables the "Off-timer function".</p> <p><b>Note:</b> When "Disable" is set, the Off-timer is cancelled.</p>
<b>Initial Power Mode</b>	<p><b>Normal</b> ↔ <b>On</b> ↔ <b>Standby</b></p> <p>Sets the power mode of the unit for when the power recovers from failure or after plugging off and in again.</p> <p><b>Normal:</b> Power returns in as the same state as before the power interruption.</p> <p><b>Standby:</b> Power returns in standby mode. (Power Indicator : red/orange)</p> <p><b>On:</b> Power returns in power On. (Power Indicator : green)</p> <p><b>Note:</b> When using multiple displays, "Standby" is preferred to be set in order to reduce a power load.</p>
<b>ID select</b>	<p>Sets panel ID number when panel is used in "Remote ID" or "Serial ID".</p> <p>Set value range: 0 - 100 (Standard value: 0)</p>
<b>Remote ID</b>	<p>The setting of this menu is valid only when using ID remote control.</p> <p><b>Off:</b> Disables ID remote control functions. You can use normal remote control operations.</p> <p><b>On:</b> Enable ID remote control functions.</p> <p><b>Note:</b> To use the ID remote control function, it is necessary to set each ID number of remote control and display unit. About the setting method, please refer to "ID Remote Control Function" (see page 36) and "ID select" (above-mentioned).</p>
<b>Serial ID</b>	<p>Sets the panel ID Control.</p> <p><b>Off:</b> Disables external control by the ID.</p> <p><b>On:</b> Enables the external control by the ID.</p>
<b>Serial Daisy Chain</b>	<p>Sets the top and end of a daisy chain when the SERIAL terminal of Display is daisy chained.</p> <p>---: When the Display is under SERIAL control on a standalone basis, or if not at the top or end of daisy chain.</p> <p><b>Top:</b> To connect to the top of daisy chain.</p> <p><b>End:</b> To connect to the end of daisy chain.</p>
<b>Studio W/B</b>	<p><b>Off:</b> Nullify all the settings adjusted.</p> <p><b>On:</b> Sets the colour temperature for TV studio.</p> <p><b>Note:</b> Valid only when the "Warm" is set as "White balance" in Picture menu.</p>
<b>Slot power</b>	<p><b>Off</b> ↔ <b>Auto</b> ↔ <b>On</b></p> <p><b>Off:</b> Power is not transmitted to the slot power.</p> <p><b>Auto:</b> Power is transmitted to the slot power only when main power is on.</p> <p><b>On:</b> Power is transmitted to the slot power when main power is on or in the standby state.</p> <p><b>Note:</b> In some cases, power is transmitted to the slot power when main power is on or in the standby state regardless of the slot power setting.</p>

# Options Adjustments

Item	Adjustments								
<p><b>Power ON Screen Delay</b></p>	<p><b>Off</b> &lt;=&gt; 1 &lt;=&gt; 2 &lt;=&gt; 3... &lt;=&gt; 30            You can set the power-on delay time of the displays to reduce the power load, when you press  to turn on the multiple displays that are set together, for example, on MULTI DISPLAY system.            Set each display's setting individually.  <b>Off:</b> The display will be turned on at the same time as  is pressed.  <b>1 to 30 (sec.):</b> Set the power-on delay time (second).            After pressing , the display will be powered on with time delay depending on this setting.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• During this function is working, the power indicator is blinking green.</li> <li>• This function also works when the power recovers from failure or after plugging off and in again the power cord.</li> </ul>								
<p><b>Clock Display</b></p>	<p><b>Off:</b> Not display the clock.  <b>On:</b> Display the clock.            The clock is displayed at the lower left of the screen when  button is pressed.</p> <div data-bbox="416 636 587 734" style="border: 1px solid gray; padding: 5px; width: fit-content;"> <p>10:00</p> </div> <p><b>Note:</b> When "PRESENT TIME Setup" is not set, the clock is not displayed even if "Clock Display" is "On". (see page 27)</p>								
<p><b>Power On Message (No activity power off)</b></p>	<p>Whether to show/hide No activity power off Precautions at the time of power ON is set.  <b>On:</b> The warning precautions are shown at the time of power ON.  <b>Off:</b> The warning precautions are not shown at the time of power ON.  <b>Note:</b> This setting is enabled only if "No activity power off" is "Enable" (see page 31).</p>								
<p><b>Function button assign 1</b>  <b>Function button assign 2</b></p>	<p>Set the functions that operates when  is pressed.  <b>Signal:</b> The "Signal" menu is displayed.  <b>Screensaver:</b> The "Screensaver" menu is displayed.  <b>ECO menu:</b> The "ECO Mode settings" menu is displayed.  <b>Set up TIMER:</b> The "Set up TIMER" menu is displayed.</p> <p><b>Note:</b>            Factory settings are as follows.            FUNCTION1 button: Signal            FUNCTION2 button: Screensaver</p> <p><b>Use the FUNCTION button</b></p> <p>The menu screen is displayed. (Example: Signal)</p> <div data-bbox="379 1256 922 1368" style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> <p>FUNCTION</p> <div style="display: flex; gap: 10px;"> <div style="border: 1px solid gray; padding: 2px 5px;">1</div> <div style="border: 1px solid gray; padding: 2px 5px;">2</div> </div> </div> <div style="font-size: 2em; margin-right: 10px;">➔</div> <div style="border: 1px solid gray; padding: 5px; width: 150px;"> <p style="text-align: right;">[ AV ]</p> <p>Signal</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">3D Y/C Filter</td> <td style="text-align: right; padding: 2px;">On</td> </tr> <tr> <td style="padding: 2px;">Colour system</td> <td style="text-align: right; padding: 2px;">Auto</td> </tr> <tr> <td style="padding: 2px;">Cinema reality</td> <td style="text-align: right; padding: 2px;">Off</td> </tr> <tr> <td style="padding: 2px;">Noise reduction</td> <td style="text-align: right; padding: 2px;">Off</td> </tr> </table> </div> </div> <p>Press the FUNCTION button to exit from the menu.</p>	3D Y/C Filter	On	Colour system	Auto	Cinema reality	Off	Noise reduction	Off
3D Y/C Filter	On								
Colour system	Auto								
Cinema reality	Off								
Noise reduction	Off								

 









## Normalisation

When both main unit buttons and remote control are disabled due to the "Button lock", "Remocon User level" or "Remote ID" adjustments, set all the values "Off" so that all the buttons are enabled again.


Press the button on main unit together with button on the remote control and hold for more than 5 seconds. The "Shipping" menu is displayed and the lock is released when it disappears.

# Troubleshooting

Before you call for service, determine the symptoms and make a few simple checks as shown below.

Symptoms		Checks
Picture	Sound	
 Interference	 Noisy Sound	Electrical Appliances Cars / Motorcycles Fluorescent light
 Normal Picture	 No Sound	Volume (Check whether the mute function has been activated on the remote control.)
 No Picture	 No Sound	Not plugged into AC outlet Not switched on Picture and Brightness/Volume setting (Check by pressing the power switch or stand-by button on the remote control.)
 No Picture	 Normal Sound	If a signal with a non-applicable colour system format, or frequency is input, only the input terminal indication is displayed.
 No Colour	 Normal Sound	Colour controls set at minimum level (see page 24, 25) Colour system (see page 39)
No remote control operations can be performed.		Check whether the batteries have discharged completely and, if they have not, whether they were inserted properly. Check whether the remote control sensor is exposed to an outdoor light or a strong fluorescent light. Check whether the remote control designed specifically for use with the unit is being used. (The unit cannot be operated by any other remote control.)
A cracking sound is sometimes heard from the unit.		If there is nothing wrong with the picture or sound, this is the sound of the cabinet undergoing very slight contractions in response to changes in the room temperature. There are no adverse effects on the performance or other aspects.
The top or bottom of the picture on the screen is cut off when I use the zoom function.		Adjust the position of the picture on the screen.
Areas at the top and bottom of the screen where the image is missing appear when I use the zoom function.		When using a video software program (such as a cinema size program) with a screen wider than one in the 16:9 mode, blank areas separate from the images are formed at the top and bottom of the screen.
I can hear sounds coming from inside the unit.		When the power is turned on, a sound of the display panel being driven may be heard: This is normal and not indicative of malfunctioning.
Parts of the unit become hot.		Even when the temperature of parts of the front, top and rear panels has risen, these temperature rises will not pose any problems in terms of performance or quality.
Power automatically turns off unexpectedly.		Check the settings of "No signal power off", "PC Power management", "DVI-D Power management" and "No activity power off". Any of them may be set to "On (Enable)". (see page 31, 32)
This LCD Display uses special image processing. Hence a slight time lag may occur between image and audio, depending on the type of input signal. However, this is not a malfunction.		

## LCD Display panel

Symptoms	Check
The screen darkens slightly when bright pictures with minimal movements are shown.	The screen will darken slightly when photos, still images of a computer or other pictures with minimal movements are shown for an extended period. This is done to reduce image retention on the screen and the shortening of the screen's service life: It is normal and not indicative of malfunctioning.
It takes a while for the picture to appear.	The unit digitally processes the various signals in order to reproduce esthetically pleasing images. As such, it sometimes takes a few moments for the picture to appear when the power has been turned on, when the input has been switched.
The edges of the images flicker.	Due to the characteristics of the system used to drive the panel, the edges may appear to flicker in the fast-moving parts of the images: This is normal and not indicative of malfunctioning.
There may be red spots, blue spots, green spots and black spots on the screen.	This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as fixed points of red, blue, green, or black. Please note this does not affect the performance of your LCD.
 Image retention appears	Image retention may occur. If you display a still picture for an extended period, the image might remain on the screen. However, it will disappear after a while. This is not considered as malfunction.

# Applicable Input Signals

## PC signals

\*Mark: Applicable input signal

	Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)	RGB IN (Dot clock (MHz))	PC IN (Dot clock (MHz))	DVI-D IN (Dot clock (MHz))	HDMI1 HDMI2
1	640x400@70Hz	31.46	70.07	*(25.17)	*(25.17)	*(25.17)	
2	640x400@85Hz	37.86	85.08	*(31.5)	*(31.5)	*(31.5)	
3	640x480@60Hz	31.43	59.88	*(25.15)	*(25.15)	*(25.15)	
4	640x480@60Hz	31.47	59.94	*(25.18)	*(25.18)	*(25.18)	*
5	640x480@67Hz	35.00	66.67	*(30.24)	*(30.24)	*(30.24)	
6	640x480@72Hz	37.86	72.81	*(31.5)	*(31.5)	*(31.5)	
7	640x480@75Hz	37.50	75.00	*(31.5)	*(31.5)	*(31.5)	
8	640x480@85Hz	43.27	85.01	*(36.0)	*(36.0)	*(36.0)	
9	720x400@70Hz	31.47	70.08	*(28.32)	*(28.32)	*(28.32)	
10	800x600@55Hz	34.50	55.38	*(35.33)	*(35.33)	*(35.33)	
11	800x600@56Hz	35.16	56.25	*(36.0)	*(36.0)	*(36.0)	
12	800x600@60Hz	37.88	60.32	*(40.0)	*(40.0)	*(40.0)	*
13	800x600@60Hz	38.00	60.51	*(40.13)	*(40.13)	*(40.13)	
14	800x600@72Hz	48.08	72.19	*(50.0)	*(50.0)	*(50.0)	
15	800x600@75Hz	46.88	75.00	*(49.5)	*(49.5)	*(49.5)	
16	800x600@85Hz	53.67	85.06	*(56.25)	*(56.25)	*(56.25)	
17	852x480@60Hz	31.47	59.94	*(33.54)	*(33.54)	*(34.24)	*
18	1,024x768@50Hz	39.55	50.00	*(51.89)	*(51.89)	*(51.89)	*
19	1,024x768@60Hz	48.36	60.00	*(65.0)	*(65.0)	*(65.0)	*
20	1,024x768@60Hz	48.50	60.02	*(64.99)	*(64.99)	*(65.18)	
21	1,024x768@70Hz	56.48	70.07	*(75.0)	*(75.0)	*(75.0)	
22	1,024x768@75Hz	60.24	74.93	*(80.0)	*(80.0)	*(80.0)	
23	1,024x768@75Hz	60.02	75.03	*(78.75)	*(78.75)	*(78.75)	
24	1,024x768@75Hz	61.01	75.70	*(80.05)	*(80.05)	*(81.0)	
25	1,024x768@85Hz	68.68	85.00	*(94.5)	*(94.5)	*(94.5)	
26	1,024x768@120Hz	97.55	119.99		*(115.5)	*(115.5)	
27	1,066x600@60Hz	37.64	59.94	*(53.0)	*(53.0)	*(53.0)	*
28	1,152x864@60Hz	53.70	60.00	*(81.62)	*(81.62)	*(81.62)	*
29	1,152x864@75Hz	67.50	75.00	*(108.0)	*(108.0)	*(108.0)	
30	1,152x900@65Hz	61.20	65.20	*(92.0)	*(92.0)	*(92.0)	
31	1,152x900@66Hz	61.85	66.00	*(94.5)	*(94.5)	*(94.5)	
32	1,152x900@75Hz	71.40	75.60	*(105.1)	*(105.1)	*(105.1)	
33	1,280x768@60Hz	47.78	59.87	*(79.50)	*(79.50)	*(79.50)	
34	1,280x800@50Hz	41.20	50.00	*(68.55)	*(68.55)	*(68.55)	
35	1,280x960@60Hz	60.00	60.00	*(108.0)	*(108.0)	*(108.0)	
36	1,280x960@85Hz	85.94	85.00	*(148.5)	*(148.5)	*(148.5)	
37	1,280x1,024@50Hz	52.70	50.00	*(89.38)	*(89.38)	*(89.38)	*
38	1,280x1,024@60Hz	63.34	59.98	*(108.18)	*(108.18)	*(108.18)	
39	1,280x1,024@60Hz	63.90	60.00	*(107.35)	*(107.35)	*(107.35)	
40	1,280x1,024@60Hz	63.37	60.01	*(107.5)	*(107.5)	*(107.5)	
41	1,280x1,024@60Hz	63.74	60.02	*(108.1)	*(108.1)	*(108.1)	
42	1,280x1,024@60Hz	63.98	60.02	*(108.0)	*(108.0)	*(108.0)	*
43	1,280x1,024@60Hz	63.79	60.18	*(108.19)	*(108.19)	*(108.19)	
44	1,280x1,024@66Hz	70.66	66.47	*(119.84)	*(119.84)	*(119.84)	
45	1,280x1,024@75Hz	79.98	75.02	*(135.0)	*(135.0)	*(135.0)	
46	1,280x1,024@76Hz	81.13	76.11	*(135.0)	*(135.0)	*(135.0)	
47	1,280x1,024@85Hz	91.15	85.02		*(157.5)	*(157.5)	
48	1,360x768@60Hz	47.71	60.02	*(85.5)	*(85.5)	*(85.5)	
49	1,366x768@50Hz	39.55	50.00	*(69.92)	*(69.92)	*(69.92)	
50	1,366x768@60Hz	48.36	60.00	*(86.71)	*(86.71)	*(87.44)	
51	1,400x1,050@60Hz	65.12	59.91	*(121.38)	*(121.38)	*(122.43)	
52	1,400x1,050@60Hz	65.32	59.98	*(121.75)	*(121.75)	*(121.75)	*
53	1,400x1,050@60Hz	65.35	60.12	*(121.81)	*(121.81)	*(121.85)	
54	1,400x1,050@75Hz	82.28	74.87	*(156.0)	*(156.0)	*(156.0)	
55	1,600x1,200@60Hz	75.00	60.00	*(162.0)	*(162.0)	*(162.0)	*
56	1,920x1,080@60Hz	67.50	60.00	*(148.5)	*(148.5)	*(148.5)	*
57	1,920x1,200@60Hz	74.04	59.95		*(154.0)	*(154.0)	
58	Macintosh13" (640x480)	35.00	66.67	*(30.24)	*(30.24)	*(30.24)	
59	MacintoshLC13" (640x480)	34.97	66.60	*(31.33)	*(31.33)	*(31.33)	
60	Macintosh16" (832x624)	49.72	74.55	*(57.28)	*(57.28)	*(57.28)	
61	Macintosh19" (1,024x768)	60.24	75.08	*(80.0)	*(80.0)	*(80.0)	
62	Macintosh21" (1,152x870)	68.68	75.06	*(100.0)	*(100.0)	*(100.0)	
63	Macintosh II (1,280x1,024)	80.00	75.00	*(134.4)	*(134.4)	*(135.2)	

## Component signals

\*Mark: Applicable input signal

	Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)	COMPONENT IN (Dot clock (MHz))	DVI-D IN (Dot clock (MHz))	HDMI1 HDMI2
1	525(480)/60i	15.73	59.94	* (13.5)	* (27.0)	*
2	525(480)/60p	31.47	59.94	* (27.0)	* (27.0)	*
3	625(575)/50i	15.63	50.00	* (13.5)		
4	625(576)/50i	15.63	50.00		* (27.0)	*
5	625(575)/50p	31.25	50.00	* (27.0)		*
6	625(576)/50p	31.25	50.00		* (27.0)	*
7	750(720)/60p	45.00	60.00	* (74.25)	* (74.25)	*
8	750(720)/50p	37.50	50.00	* (74.25)	* (74.25)	*
9	1,125(1,080)/60p	67.50	60.00	* (148.5)*1	* (148.5)	*
10	1,125(1,080)/60i	33.75	60.00	* (74.25)*1	* (74.25)	*
11	1,125(1,080)/50p	56.25	50.00	* (148.5)*1	* (148.5)	*
12	1,125(1,080)/50i	28.13	50.00	* (74.25)*1	* (74.25)	*
13	1,125(1,080)/24sF	27.00	48.00	* (74.25)*2		
14	1,125(1,080)/30p	33.75	30.00	* (74.25)*1	* (74.25)	*
15	1,125(1,080)/25p	28.13	25.00	* (74.25)*1	* (74.25)	*
16	1,125(1,080)/24p	27.00	24.00	* (74.25)*1	* (74.25)	*

\*1: Based on SMPTE 274M standard.      \*2: Based on SMPTE RP211 standard.


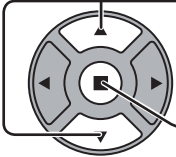
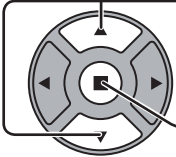
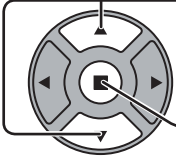
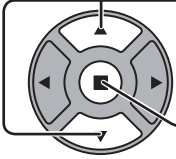
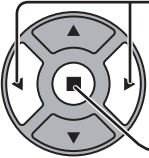
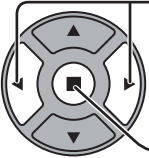

## Video signals (VIDEO)


	Signal name	Horizontal frequency(kHz)	Vertical frequency(Hz)
1	NTSC	15.73	59.94
2	PAL	15.63	50.00
3	PAL60	15.73	59.94
4	SECAM	15.63	50.00
5	NTSC 4.43	15.73	59.94
6	PAL N	15.63	50.00
7	PAL M	15.73	59.94



# Shipping condition

This function allows you to reset the unit to the factory setting.

-  Press to display the Setup menu.
-  Press to select "OSD Language".  
 Press for more than 3 seconds.
-  Press to select "Shipping".  
 Press to display the Shipping menu.
-  Press to select "YES".  
 Press to confirm.
- Wait for 10 seconds.
-  Press the power switch (⏻/⏿) on main unit to turn the power off.

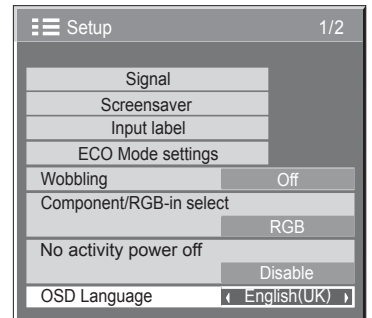

[from the unit]

- Press the MENU button till the Setup menu is displayed.
- Press the Volume Up "+" or Down "-" button to select "OSD Language".
- Press and hold the ENTER button till the Shipping menu is displayed.
- Press the Volume Up "+" or Down "-" button to select "YES".
- Press the ENTER button and wait for 10 sec.
- Press the power switch (⏻/⏿) on main unit to turn the power off.



# Specifications

	TH-42LF30ER	TH-47LF30ER
<b>Power Source</b>	220 - 240 V AC, 50/60Hz	
<b>Power Consumption</b>		
Power on	290 W	340 W
Stand-by condition	0.5 W	0.5 W
Power off condition	0.3 W	0.3 W
<b>LCD Display panel</b>	42-inch IPS panel, 16:9 aspect ratio	47-inch IPS panel, 16:9 aspect ratio
<b>Screen size</b>	930 mm (W) × 523 mm (H) × 1,067 mm (diagonal)	1,039 mm (W) × 584 mm (H) × 1,192 mm (diagonal)
(No. of pixels)	2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]	2,073,600 (1,920 (W) × 1,080 (H)) [5,760 × 1,080 dots]
<b>Operating condition</b>		
Temperature	0 °C - 40 °C	
Humidity	20 % - 80 %	
<b>Applicable signals</b>		
Colour System	NTSC, PAL, PAL60, SECAM, NTSC 4.43, PAL M, PAL N	
Scanning format	525 (480) / 60i · 60p, 625 (575) / 50i · 50p, 750 (720) / 60p · 50p, 1125 (1080) / 60i · 60p · 50i · 50p · 24p · 25p · 30p · 24sF	
PC signals	VGA, SVGA, XGA, SXGA UXGA .... (compressed) Horizontal scanning frequency 30 - 110 kHz Vertical scanning frequency 48 - 120 Hz	
<b>Connection terminals</b>		
VIDEO	BNC	1.0 Vp-p (75 Ω)
AUDIO L-R	RCA Pin jack × 2	0.5 Vrms
HDMI 1/2	TYPE A Connector	
COMPONENT/RGB IN		
G/Y	BNC	with sync 1.0 Vp-p (75 Ω)
B/Pb/Cb	BNC	0.7 Vp-p (75 Ω)
R/Pr/CR	BNC	0.7 Vp-p (75 Ω)
AUDIO L-R	RCA Pin jack × 2	0.5 Vrms
DVI-D IN	DVI-D 24 Pin × 2	Compliance with DVI Revision 1.0
DVI-D OUT	Content Protection	Compatible with HDCP 1.1
AUDIO	Stereo mini jack (M3) × 1	0.5 Vrms, Shared with PC IN
PC IN	High-Density Mini D-sub 15 Pin	G with sync 1.0 Vp-p (75 Ω) G without sync 0.7 Vp-p (75 Ω) B: 0.7 Vp-p (75 Ω) R: 0.7 Vp-p (75 Ω) HD/VD: 1.0 - 5.0 Vp-p (high impedance) 0.5 Vrms, Shared with DVI-D IN
AUDIO	Stereo mini jack (M3) × 1	
SERIAL IN	External Control Terminal	
SERIAL OUT	D-sub 9 Pin × 2	RS-232C compatible
<b>Sound</b>		
Speakers	50 mm × 90 mm × 2 pcs	
Audio Output	10 W [5 W + 5 W] (10 % THD)	
<b>Dimensions (W × H × D)</b>	968 mm × 561 mm × 116 mm	1,079 mm × 624 mm × 117 mm
<b>Mass (weight)</b>	approx. 21.0 kg	approx. 25.0 kg

## Notes:

- Design and specifications are subject to change without notice. Mass and dimensions shown are approximate.
- This equipment complies with the EMC standards listed below.  
EN55022, EN55024, EN61000-3-2, EN61000-3-3.

## Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste. For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### For business users in the European Union


If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### [Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

### Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

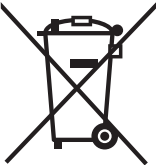

Cd

### Customer's Record

The model number and serial number of this product can be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

**Panasonic Corporation**

Web Site : <http://panasonic.net>

© Panasonic Corporation 2011