


Neets Control – ALFa II

P/N#: 310-0301

User Manual

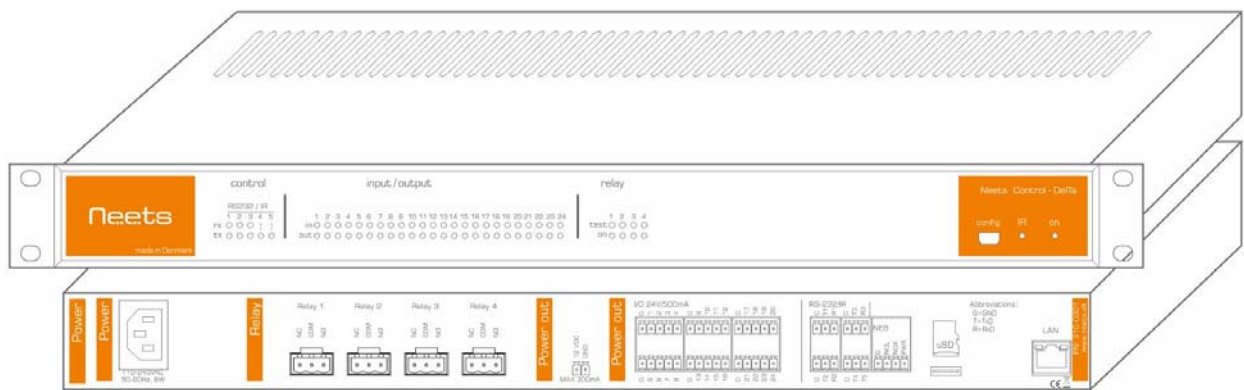

Neets

Foreword

The purpose of this document is to describe how to install and configure the Neets Control – AIFa II.

COPYRIGHT - All information contained in this manual is the intellectual property of and copyrighted material of Neets. All rights are reserved. You may not allow any third party access to content, information or data in this manual without Neets' express written consent.

CHANGES - Neets reserve the right to change the specification and functions of this product without any notice.

Questions, AFTER reading this manual, can be addressed to your local distributor or:

Neets A/S
Denmark

by E-Mail: Support@Neets.dk

or you may use our contact form at www.neets.dk

Revision list

This document (no: 310-0310-001-007) has the following revision changes:

Author:	Date	Description	Pages	Rev
MH:	06-11-14	First release.	All	1.00
<hr/>				
<hr/>				

Table of content


Foreword	1
Revision list	1
Table of content	2
Description	3
Specifications	4
Connections on AIFa II.....	4
Hardware installation.....	5
Mounting the unit in a 19" rack	5
Mount cable relief bracket and covers	6
Connections.....	7
AC Line	7
Relays.....	7
Power out.....	7
I/O ports	7
RS-232/IR ports	8
NEB port.....	8
uSD-Card.....	9
Test buttons	9
Front panel USB	9
Troubleshooting.....	10
Error indication using LEDs	10

Description

Neets Control – AIFa II gives you comprehensive yet intuitive control of complex AV systems in auditoriums, large meeting rooms, and conference rooms. All AV systems throughout the room are easily controllable from any mobile touch device. The AIFa II is very well suited for integrating videoconference into meeting rooms and makes it very easy to control both your AV-equipment and videoconference and with a tablet.

By adding NEB keyboard, level control and NEB Expansion to the AIFa II gives you the opportunity to control your AV-equipment and makes it easy to use through the same interface and recognizable custom graphical user interface. Custom graphical user interfaces can be made and configured easily using the new and intuitive Neets Project Designer software. You can drag and drop the devices you need from the extensive device driver library, create custom buttons, or use one of the many templates to make control of the room a breeze.

All connected devices are controlled through a large number of RS-232, LAN and IR ports, making the Neets Control - AIFa II capable of handling even very demanding facilities.

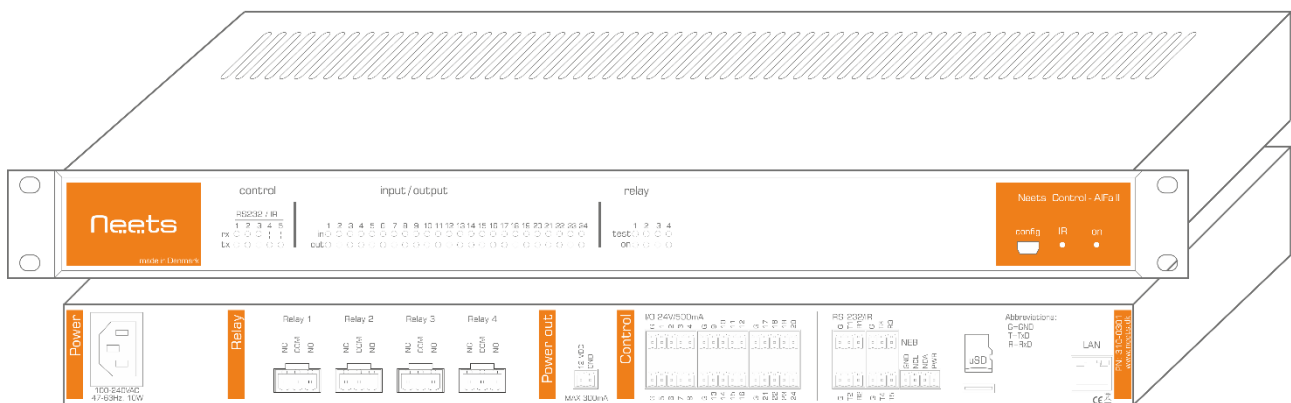

Function description

RS-232 (Tx+Rx) / IR (controls up to 2 IR devices on each port)	3
RS-232 (Tx) / IR (controls up to 2 IR devices on each port)	2
LAN device control	10
I/O	24
Relays	4
Test buttons	4
NEB Bus (including Extender up to 20m)	1 (5 units)
IR Learn option with Device Editor	Yes

Specifications

Power input	
Voltage	100 VAC – 240 VAC
Frequency	47 Hz – 63 Hz
Power usage	10 W
Connector type	IEC plug

Relay Output	
Voltage max	240 VAC
Current max	8 A
Load max AC1	1150 W @ 230 VAC
Load max AC15	500 W @ 230 VAC
Single-phase motor	370 W @ 230 VAC
Connector	3 pin screw block

Power Output	
Voltage	12 VDC
Current (fused)	350 mADC

Input / Output	
Input trigger low	< 1VDC
Input trigger high	> 4VDC
Output type	Open drain
Isolated output	No
Max voltage load	24VDC
Max current	0.5A
Connector	5 pin screw block

RS-232	
Baud rate	1200 – 115200 bit/sec
Data bits	7, 8
Parity	Even, Odd, None
Stop bits	1, 2

IR	
Transmit frequency	400 Hz to 500 KHz
IR Learn frequency	1 KHz to 150 KHz

uSD-Card	
Type	Micro-SD
Card size min / max	1Gb / 4Gb
File system	FAT 32

Network (LAN)	
Speed	10 / 100 Mbit
Duplex modes	Half or Full
DHCP	Default off
Default IP	192.168.254.252
Default gateway	192.168.1.1
Default subnet mask	255.255.255.0


Approvals	
IEC/EN	61000-6-1
IEC/EN	61000-6-2

General	
Width (mm)	437 mm / 483 mm
Depth (mm)	141 mm
Height (mm)	44 mm (1U)
Weight kg	1.9 kg
Shipping weight	2.2 kg
Shipping dimension (W/D/H)	530 mm / 230 mm / 80 mm
Storage temperature	-20 °C to 50 °C
Storage moisture	Non-condensing
Operation temperature	0 °C to 30 °C
Operation moisture	Non-condensing

Connections on AIFa II

Connectors and indicators are available on the front and rear panels. These are shown below:


Front:

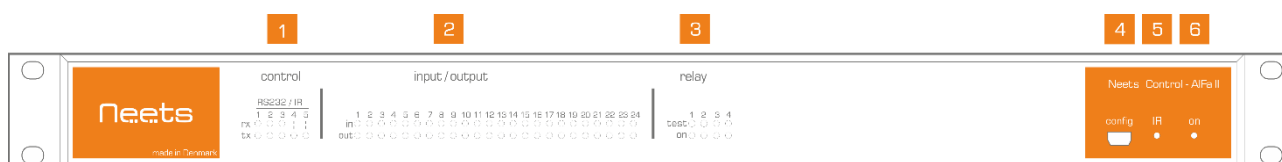

Number: Description

1	Indication for transmitting or receiving on RS-232 or IR
2	Indication for Input and Output on rear panel (I/O)
3	Relay indication and test buttons
4	Mini USB for programming
5	Input for IR learning
6	Power indication

Rear:

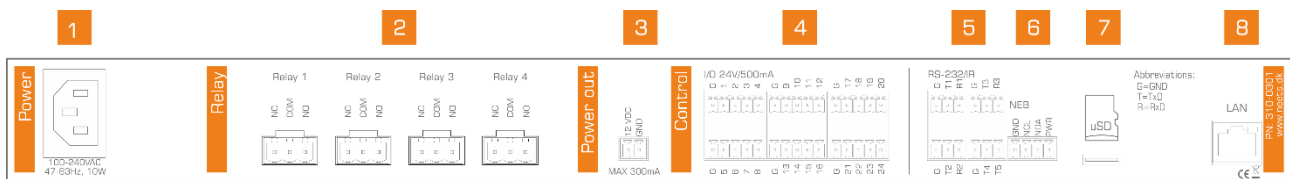

Number: Description

1	110-230 VAC power in
2	4 x potential-free relays
3	12 VDC output power
4	24 x input/output connectors
5	5 x RS-232 or IR connectors (3 x bidirectional RS-232)
6	1 x Neets Extension Bus (NEB)
7	1 x μ SD card
8	1 x RJ-45 Network (LAN) connector

Hardware installation

The AIFa II is designed to be mounted in a rack or as a stand-alone unit on a desk, drawer or other stable surface.

Always allow at least 40 mm of free space above the unit as air circulation around the unit is needed for reliable performance. If installed in a closed environment, forced air circulation may be needed.


Mounting the unit in a 19" rack


The AIFa II can easily be installed in a 19" rack.

Due to the standard 1U height, low weight and small mounting depth the AIFa II can be mounted from the rack front without the use of a rack shelf or rear supporting rails.

1: Mount two clip nuts on each side of the rack as shown below:

2: Slide the AIFa II into the rack and secure with the M6x10 screws.

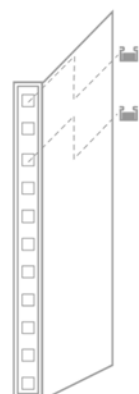

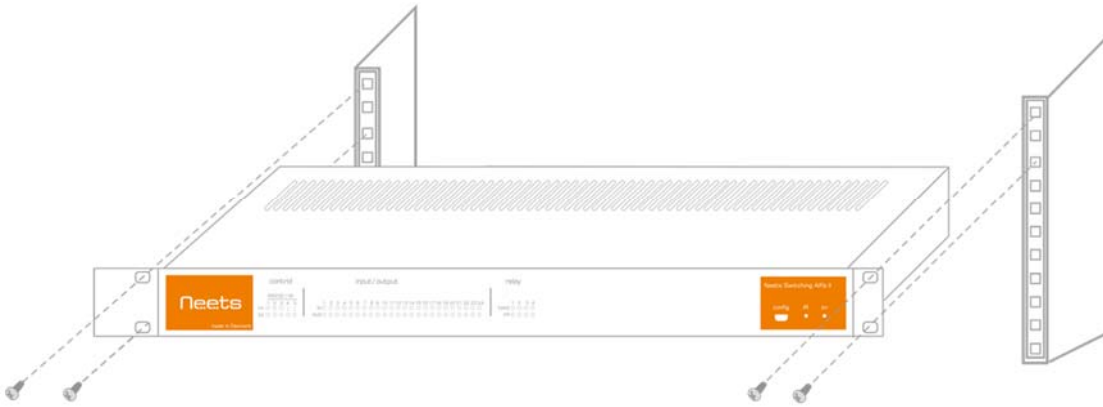


3: The unit is now ready to be connected with all peripherals as needed.

Mounting cable relief bracket and covers


To secure heavy duty cables at the relay receptacles a cable relief bracket and cover are supplied with the AIFa II.

Secure the cable relief bracket to the AIFa II with the supplied M4x6mm screws. Insert your cable in the supplied screw terminal connector and insert this connector into the appropriate relay receptacle in the AIFa II.

Secure the cables to the cable relief bracket with supplied cable binders.

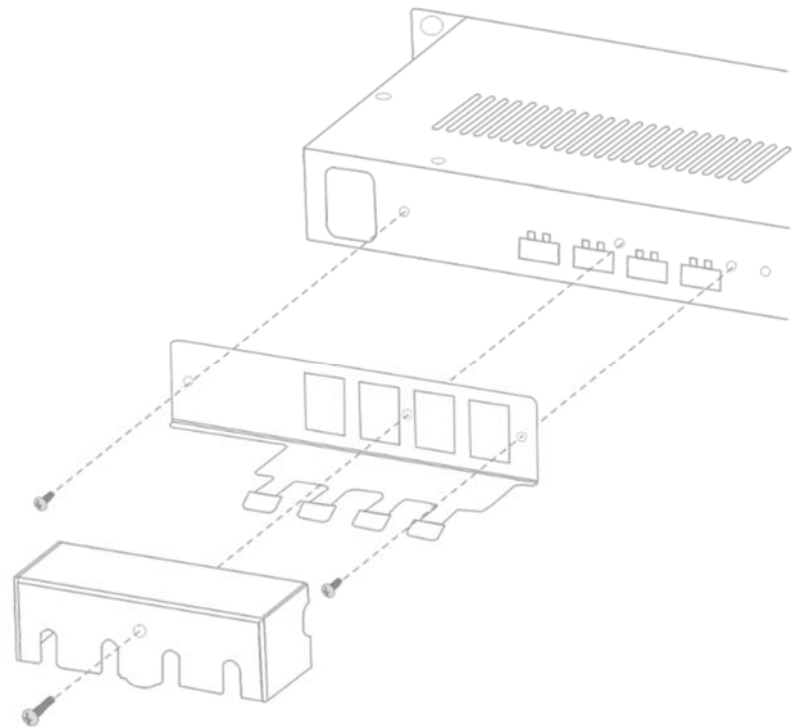

Finally, mount the cable relief cover over the cable relief bracket and secure with supplied M4x45mm screw.

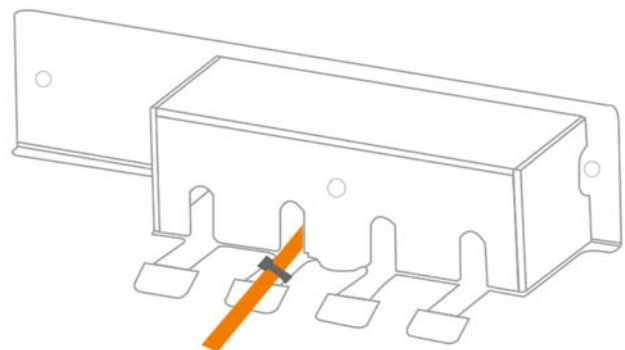


Connections and Controls

AC Line

Connect the AIFa II to the AC line supply using the supplied power cable. The cable will be equipped with a line socket connector for use in the country of sale.


The AIFa II incorporates a universal mains power supply which accepts AC line input from 100 V to 240 V.

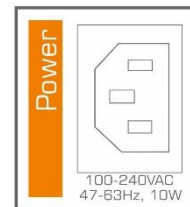

Relays

Relays allow the option of NO (Normal Open) and the NC (Normal Close) for greatest flexibility. An LED for each relay is located on the front panel. When the LED illuminates green, it indicates the COM is connected to NO.

You can connect cables directly to the AIFa II using the supplied terminal block connectors for each relay. Use the supplied cable relief brackets to fix the cables with a cable tie to prevent accidental disconnection of the cables. (See section Mounting cable relief bracket and covers on page 6.)

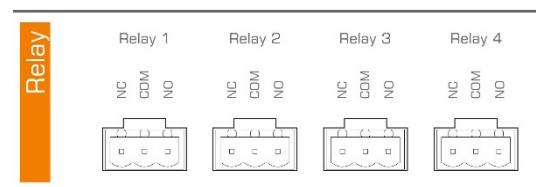

If you want to connect and conveniently switch AC power for external equipment, install the Neets IEC Mains Adaptor (306-0015, sold separately) instead of the terminal block and cable relief brackets.



Neets IEC Mains Adaptor

Power out

With the power out port it is possible to supply power to external devices that use a 12 V direct current supply voltage. For example, it can be used to supply the Neets I/O keyboard for LED indication. The output is overload protected with a self-resetting fuse.

I/O ports

The Neets Control – AIFa II has 24 I/O (Inputs/Outputs) available that can be configured as either output or input. They can be used for an external control keypad, PIR (movement) sensor, keyboard lock, extra relays, or other compatible uses. The ports are not potential free; you may need external relays to prevent ground loops.







When used as outputs the I/O ports are active low. When activated, the I/O ports are tied to GND through a FET transistor (also called open drain/collector function). Each I/O can draw up to 24VDC/500mA. For each I/O there is a LED on the front of the AIFa II indicating the current output state. The LED is on when the output is active (the output is connected to GND).

When used as inputs, the applied voltage must be below 1 VDC to be accepted as LOW, and above 4 VDC (but below 24 VDC) to be accepted as HIGH. The inputs are default HIGH and must be connected to ground in order to change state. For each I/O there is a LED on the front of the AIFa II indicating the current input state. When the LED lights orange it indicates that the input is high; when the LED is off the input is low.

RS-232/IR ports

The onboard RS-232 ports (T1, R1, T2, R2, T3, R3, T4 and T5) are used for one- or two-way communication. Ports 1-3 are two-way: (transmit and receive); ports 4-5 are one-way (transmit only). Two way ports are used for devices on which you want to use reply (e.g. your projector). All of the RS-232/IR ports can be configured in the software either as RS-232 or as IR emitter.

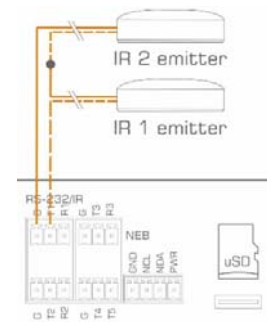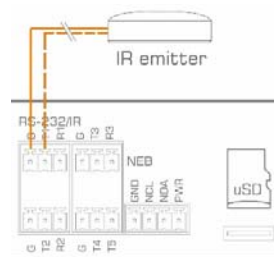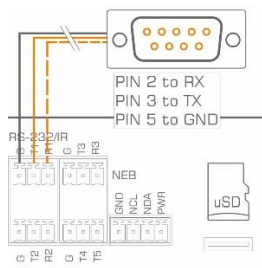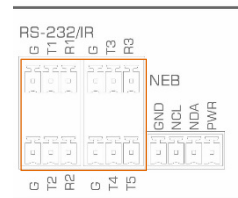


When used as RS-232 transmit port: Connect the device to T1, R1 and GND, as shown here above.

When used as single IR port: Connect the IR emitter to T1 (white striped wire) and GND, as shown above.

When used as dual IR port: Connect the IR 1 emitter to T1 (white striped wire) and black wire on IR 1 emitter to IR 2 emitter (white striped wire), and black wire from IR 2 emitter to GND, as shown above.

NEB port

The AIFa II has a built-in NEB (Neets Extension Bus). This port is used to add up to 5 NEB devices (e.g. two Keypads, two Level Controls and one Expander). The NEB port includes an NEB extender that allows up to 40m of separation between the AIFa II and your NEB devices. However, you MUST connect NEB extender module (Neets P/N 310-0005) at the end for your NEB units.

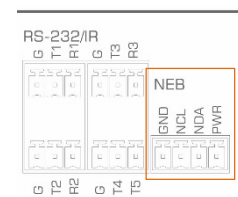


The AIFa II has a built-in NEB extender; therefore, you need an extender for all your NEB units as well.

uSD-Card

The uSD-Card stores the AIFa II project setup created in the Project Designer software including general settings and Graphical User Interface. The card should not be removed during normal operation.

To remove the SD Card from the unit, push it GENTLY into the holder about 1mm (by using your finger tip). Release again, and it will slide out.

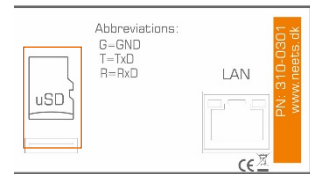


 REMEMBER to remove power from unit (power down) before removing uSD card! 

LAN

The network connector integrates the system into the local area network.

There are two LEDs on the connector with the following indication:

Color:	Off	On	Blink
Yellow	No Link	Link	Activity
Green	10Mbit	100Mbit	

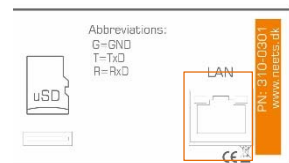

Factory default IP settings is:

IP address: 192.168.254.253
 Subnet: 255.255.255.0
 10/100Mbit: Auto
 DHCP: Disabled

Test buttons


The four test buttons are used to test the built in relay function. The test buttons are intended for use during installation to control functionality of connected devices. The LEDs will indicate if the relay is activated (green) or not activated (off) during use of the test buttons.



Front panel USB


The USB port (labeled "config" on the front) is used exclusively for configuring the Neets Control – AIFa II from the Neets Project Designer software. It cannot be used to control any external devices.

The USB port cannot power the control system while configuring, so always remember to connect the AC power. The USB connector for connecting to the Neets Control – AIFa II is type "mini USB B 5P". (It is available on the web as a USB A to Mini USB B 5P).

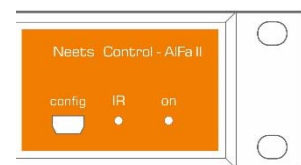

IR receiver


The IR learner can be connected directly to the Neets Device Editor software through the USB port. This enables learning of IR codes from your existing IR remote for easy configuration on-site or at your desk.

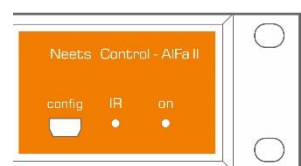

Troubleshooting

On the front of the unit you will find LED indicators used for error indication (the “on” LED and input/output LED number 1-6).


The “on” LED can have the following indications:

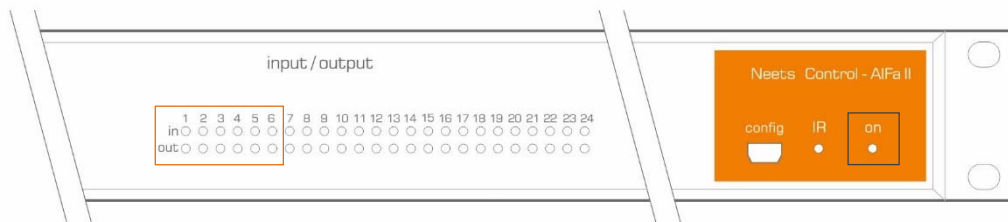




Description	“on” LED behavior
System starting	Orange non-flashing
System running	White non-flashing
System error	Red flashing
Firmware upgrade in progress	Orange non-flashing

Error indication using LEDs

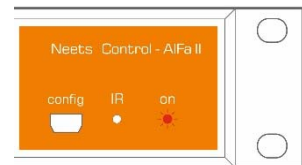If you experience a system error, the front panel “On” LED indicator will flash red together with some of the input/output LED indicators. You can find the error type and possible solutions below.



LED shows	Description	Solution
	No connection to one or more NEB units.	<ul style="list-style-type: none"> Check that the NEB units used in the project are connected. Make sure that a NEB extender is used at the end of the connected NEB unit. <p>After doing one of the above, remove the power to the control system for 20 sec before reconnecting the power again.</p>
	No project found on the control system	<ul style="list-style-type: none"> Try to upload the project again. If the problem persists after several successful uploads, contact Neets or your local distributor
	Missing SD card or error on SD card	<ul style="list-style-type: none"> Make sure that there is a SD card inserted in the control system. (Look at the rear panel.)

	<p>Unexpected Error</p>	<p>After doing the above, turn off the power to the control system for 20 seconds before turning the power on again.</p> <ul style="list-style-type: none"> ○ Turn off the power to the control system for 20 sec before turning the power on again.
	<p>No contact to Neets network unit</p>	<p>If the error is not resolved, contact Neets or your local distributor.</p> <ul style="list-style-type: none"> ○ When adding a Neets Network unit (e.g. Switching Relay - 4 or 8), the AIFa II displays this error when it does not have contact with all units. Check to be certain the SN used in the Project Designer matches the one for the unit on your network.
	<p>Firmware upgrade Neets network unit</p>	<ul style="list-style-type: none"> ○ One or more of the Neets network units used in the current project needs a firmware upgrade before it will work with this project.