


DC120 Quick Start Guide

⚠ Important

* Please activate your warranty at www.lumens.com.tw/reg


* Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents

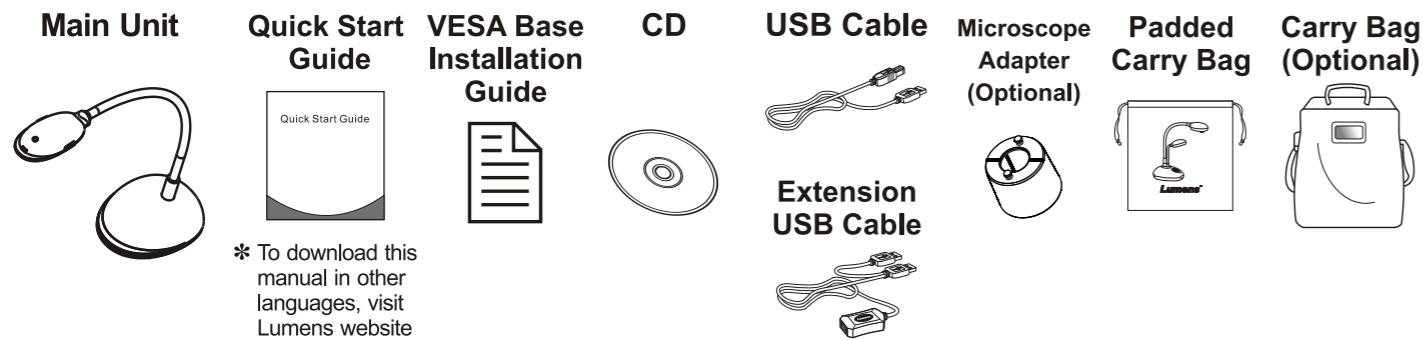


2. Installation & Connection

▼ Connect to a Computer


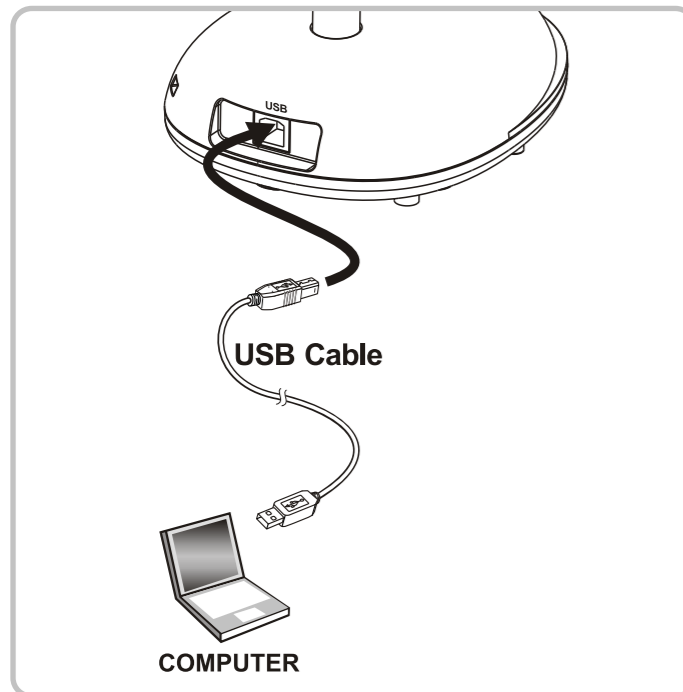




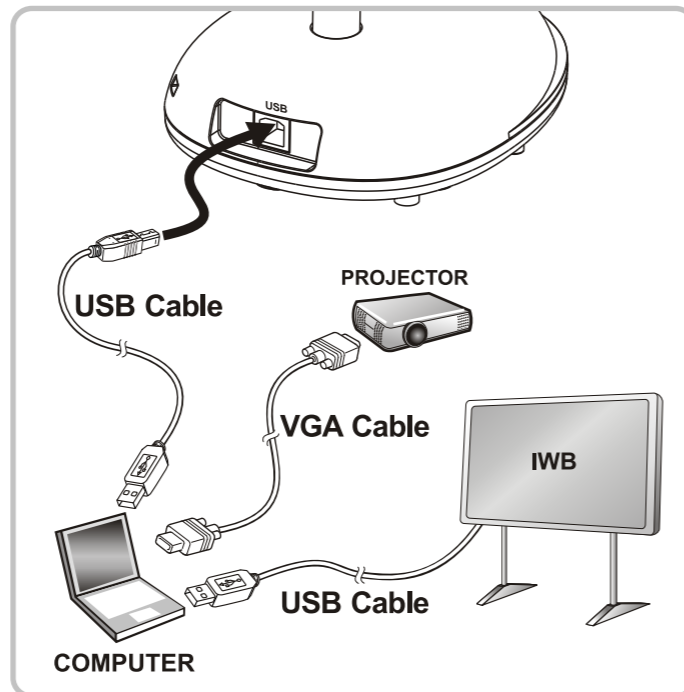

▼ Connect to an Interactive Whiteboard (IWB)

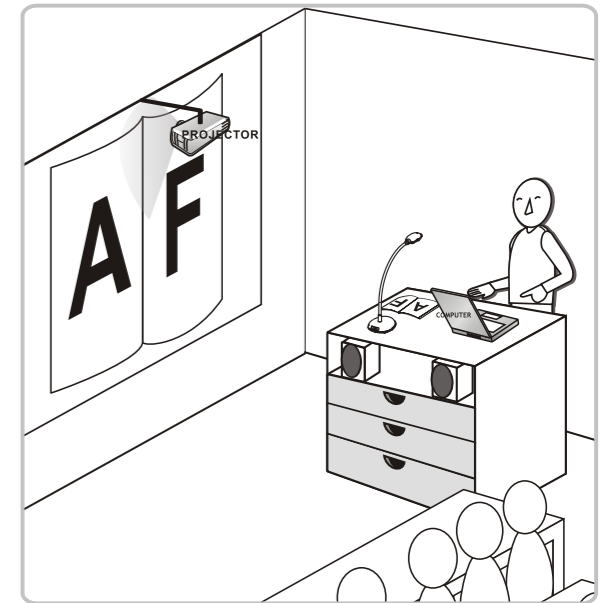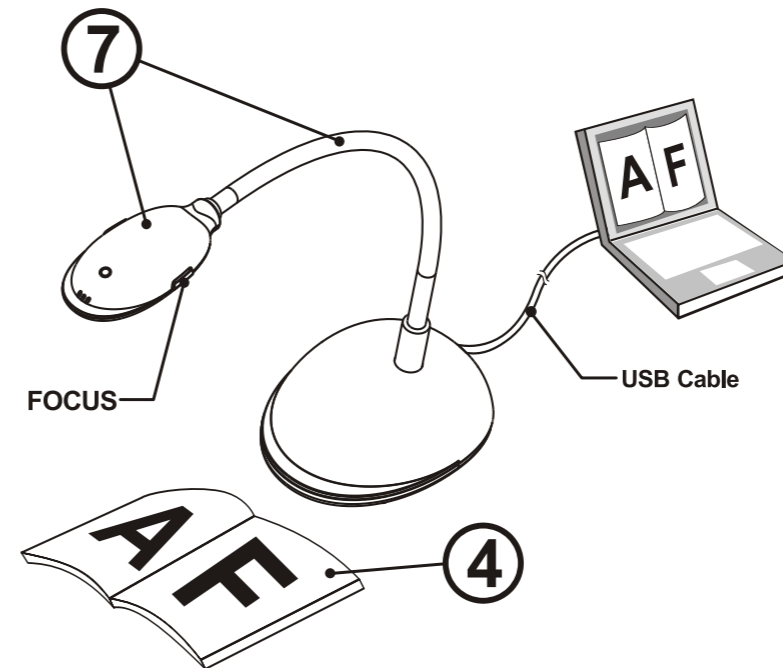

⚠ The power is on while USB is connected.

3. Getting Started



- ① Install your Ladibug™, please refer to opposite page [4. Ladibug™ Image software Installation.](#)
 - ② Double-click the [Ladibug]  icon to start your Ladibug™.
 - ③ Mouse over the [Ladibug]  icon to select menu functions.
 - ④ Place document or object to be displayed under the camera.
 - ⑤ Click [PREVIEW]  to display a live image.
 - ⑥ Click [AUTO TUNE]  to optimize the image. You are ready to teach or present!
 - ⑦ Reposition the gooseneck as needed and press the [FOCUS] button.
- * Each time the camera head is moved, press the [FOCUS] button to refocus the lens.
- * Please refer to the [DC120 user manual](#) for more operations.

4. Ladibug™ Image software Installation Instructions

▼ System Requirements


Windows XP	Windows Vista / Windows 7	MAC OS X 10.4 / 10.5 / 10.6 (32-bits Kernel)
<ul style="list-style-type: none"> • Min CPU: P4 1.8 Ghz • Min Memory: 512MB • Direct X 9 Compatible • Min Resolution: 1024x768 • 100MB Min Disc Space 	<ul style="list-style-type: none"> • Min CPU: P4 2.4 Ghz • Min Memory: 1GB (32-bits) /2GB(64-bits) • Direct X 9 Compatible • Min Resolution: 1024x768 • 100MB Min Disc Space 	<ul style="list-style-type: none"> • Min CPU: PowerPC G4 866MHz or Intel Pentium® 1.83GHz Intel Core 2 Duo • Min Memory: 512MB • Min resolution 1024x768 • 24-bit color display monitor • 1GB Min Disc Space • Min QuickTime 7.4.5

⚠ Very Important


- * To ensure successful installation, please make sure each of the following steps is completed.
- * The content of CD might be changed, please contact our distributors or check Lumens' website for download service.

➔ Windows XP / Vista / 7


1. Insert the software CD into your computer.
2. The Ladibug™ software installation program will automatically launch. Please select [Install Ladibug] to begin installation.
3. Please read instructions, then press [Next].

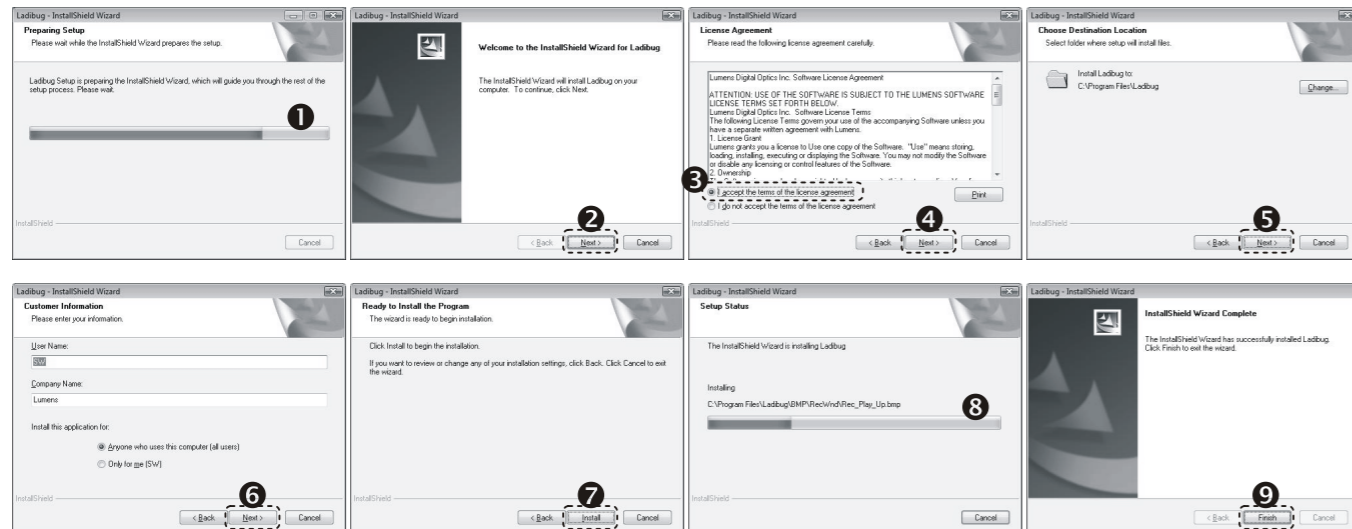

4. Press [Yes] to create a Ladibug™ shortcut on your desktop.

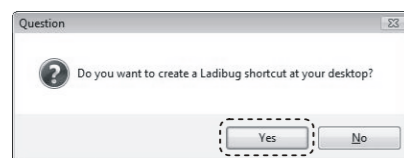


5. Please click the [Finish] button then reboot the system.

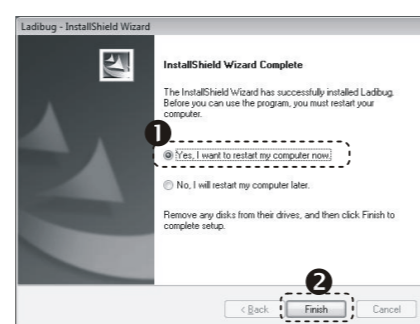


➔ MAC

1. Insert the software CD into your computer.
2. Click the CD icon when appears.
3. Select MAC folder and click [Ladibug] to begin installation.

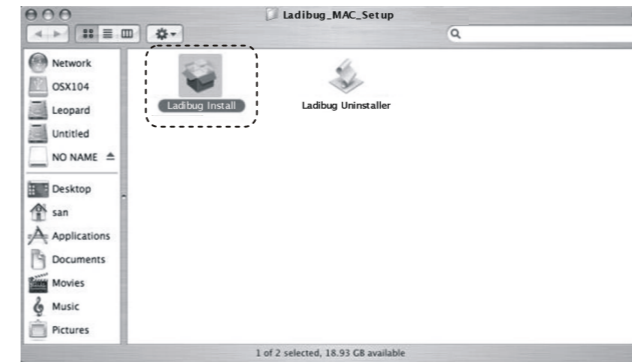


4. Please follow the instructions and press [Next].

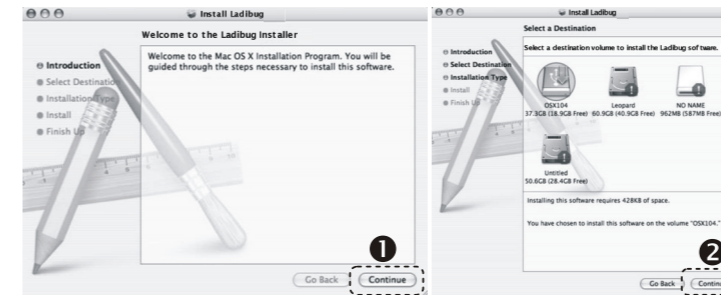


5. Click [Upgrade].



7. Click [Continue].

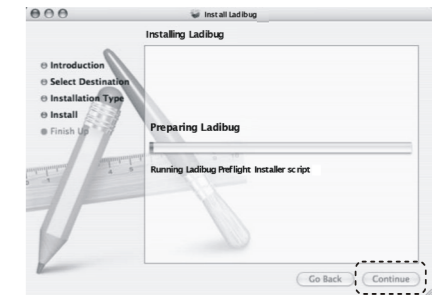

8. Click [Restart] to finish installing the software.

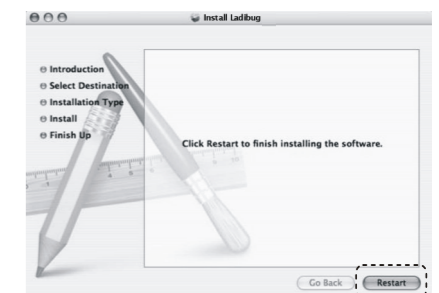

6. Enter your username and password, then click [OK].

